



Cisco 4G LTE Software Configuration Guide

First Published: March 16, 2012

Last Updated: January 28, 2015

This document provides an overview of the software features and configuration information for Cisco Fourth-Generation (4G) Long-Term Evolution (LTE) Wireless WAN (WWAN) Enhanced High-Speed WAN Interface Cards (EHWIC-4G-LTEs), Cisco 819 Series 4G LTE ISRs, Cisco C880 Series 4G LTE ISRs and Cisco C890 Series 4G LTE ISRs.

Cisco EHWIC-4G-LTEs are single-wide 4G Wireless WAN (WWAN) EHWICs supported on Cisco Integrated Services Router Generation 2 (ISR G2). For Cisco EHWIC-4G-LTE SKUs, faceplate, and LED descriptions, see the [Cisco 4G LTE Hardware Installation Guide](#).

Finding Feature Information

Your software release may not support all the features documented in this module. For the latest feature information and caveats, see the release notes for your platform and software release. To find information about the features documented in this module and to see a list of the releases in which each feature is supported, see the [“Feature Information for Cisco 4G LTE”](#) section on page 80.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to <http://www.cisco.com/go/cfn>. An account on Cisco.com is not required.

Contents

- [Overview of Cisco 4G LTE, page 2](#)
- [Prerequisites for Configuring Cisco 4G LTE, page 14](#)
- [Restrictions for Configuring Cisco 4G LTE, page 14](#)
- [Cisco 4G LTE Features, page 14](#)
- [How to Configure Cisco 4G LTE, page 20](#)
- [Configuration Examples for 4G LTE, page 49](#)



- [Upgrading the Modem Firmware, page 59](#)
- [SNMP MIBs, page 72](#)
- [Troubleshooting, page 73](#)
- [Additional References, page 77](#)
- [Feature Information for Cisco 4G LTE, page 80](#)

Overview of Cisco 4G LTE

Cisco EHWIC-4G-LTEs are single-wide Wireless WAN (WWAN) EHWICs supported on Cisco 1900 Series, 2900 Series, and 3900 Series Integrated Services Router Generation 2 (ISR G2) routers. Cisco EHWIC-4G-LTEs operate over Fourth-Generation Long-Term Evolution (4G LTE) cellular networks and Third-Generation (3G) cellular networks. The Cisco 4G LTE WWAN EHWIC offers a highly secure, simplified, and cost-effective WAN alternative to DSL or Frame Relay. In areas where terrestrial broadband services (cable, DSL, or T1) are not available or are expensive, 4G LTE WWAN connectivity can be a viable alternative. Using the integrated services available on the Cisco ISR G2 routers, Cisco 4G LTE Wireless WAN EHWICs can provide instant and mobile communications during disasters and service outages.

Cisco 819 Series 4G LTE ISRs, Cisco C880 Series 4G LTE ISRs, and Cisco C890 Series 4G LTE ISRs also support integrated 4G LTE wireless WAN.

Cisco 4G LTE EHWICs and Cisco 800 Series 4G LTE ISRs support the following 4G/3G modes:

- **4G LTE**—4G LTE mobile specification provides multi-megabit bandwidth, more efficient radio network, latency reduction, and improved mobility. LTE solutions target new cellular networks. These networks initially support up to 100 Mb/s peak rates in the downlink and up to 50 Mb/s peak rates in the uplink. The throughput of these networks is higher than the existing 3G networks
- **3G Evolution High-Speed Packet Access (HSPA/HSPA+)**—HSPA is a UMTS-based 3G network. It supports High-Speed Downlink Packet Access (HSDPA) and High-Speed Uplink Packet Access (HSUPA) data for improved download and upload speeds. Evolution High-Speed Packet Access (HSPA+) supports Multiple Input/Multiple Output (MIMO) antenna capability.
- **3G Evolution-Data Optimized (EVDO or DOrA) Mode**—EVDO is a 3G telecommunications standard for the wireless transmission of data through radio signals, typically for broadband Internet access. DOrA refers to EVDO Rev-A. EVDO uses multiplexing techniques including Code Division Multiple Access (CDMA), as well as Time Division Multiple Access (TDMA), to maximize both individual users' throughput and the overall system throughput.

Table 1 describes the Cisco 4G WWAN EHWIC product SKUs.

Table 1 Cisco 4G EHWICs by Mode, Operating Region, and Frequencies

Cisco 4G EHWIC	Description	Mode	Operating Regions	Frequency Band
EHWIC-4G-LTE-V	<p>EHWIC-4G-LTE-V is a dedicated Multimode LTE SKU for Verizon Wireless networks and it is backwards compatible with these technologies:</p> <ul style="list-style-type: none"> • Evolved High-Rate Packet Data (EHRPD) • Single Carrier Evolution Data Optimized (1x EVDO) Revision A • Single Carrier Radio Transmission Technology (1xRTT) 	<ul style="list-style-type: none"> • LTE • EVDO Revision A (DOcA) 	North America	<ul style="list-style-type: none"> • For LTE: 700 MHz (band 13) • For CDMA 1xRTT and 1xEVDO Revision A <ul style="list-style-type: none"> – 800 MHz – 1900 MHz
EHWIC-4G-LTE-A	<p>EHWIC-4G-LTE-A is a dedicated Multimode LTE SKU for AT&T Wireless networks and it is backwards compatible with these technologies:</p> <ul style="list-style-type: none"> • Universal Mobile Telecommunications System (UMTS) • High Speed Packet Access + (HSPA+) • HSPA • Global System for Mobile communications (GSM) • Exchanged Data rates for GSM Evolution (EDGE) • General Packet Radio Services (GPRS) 	<ul style="list-style-type: none"> • LTE • HSPA+ • HSPA • UMTS • EDGE • GPRS 	North America	<p>For LTE:</p> <ul style="list-style-type: none"> • 700 MHz (band 17) • AWS (band 4) • 2100 MHz (band 1) <p>For UMTS, HSPA+ and HSPA:</p> <ul style="list-style-type: none"> • 800 MHz • 850 MHz • 1900 MHz • 2100 MHz <p>For GSM, EDGE and GPRS:</p> <ul style="list-style-type: none"> • 850 MHz • 900 MHz • 1800 MHz • 1900 MHz

Table 1 Cisco 4G EHWICs by Mode, Operating Region, and Frequencies

Cisco 4G EHWIC	Description	Mode	Operating Regions	Frequency Band
EHWIC-4G-LTE-G	EHWIC-4G-LTE-G is a dedicated Multimode LTE SKU for global wireless networks and it is backwards compatible with these technologies: <ul style="list-style-type: none"> • UMTS • HSPA+ • HSPA • GSM • EDGE • GPRS 	<ul style="list-style-type: none"> • LTE • UMTS • HSPA+ • HSPA • EDGE • GPRS 	Global	For LTE: <ul style="list-style-type: none"> • 800 MHz (band 20) • 900 MHz (band 8) • 1800 MHz (band 3) • 2100 MHz (band 1) • 2600 MHz (band 7) For UMTS/HSPA+/HSPA: <ul style="list-style-type: none"> • 900 MHz • 2100 MHz For GSM/EDGE/GPRS: <ul style="list-style-type: none"> • 900 MHz • 1800 MHz • 1900 MHz
EHWIC-4G-LTE-JP	EHWIC-4G-LTE-JP is a dedicated Multimode LTE SKU for NTT Docomo Japan, and is based on the Sierra Wireless MC7700 modem. EHWIC-4G-LTE-JP is backward compatible with these technologies: <ul style="list-style-type: none"> • UMTS • HSPA+ 	<ul style="list-style-type: none"> • LTE • UMTS • HSPA+ 	Japan	For LTE: 2100 MHz (band 1) For UMTS/HSPA+: <ul style="list-style-type: none"> • 2100 MHz (band 1) • 1900 MHz (band 2) • 850 MHz (band 5)
EHWIC-4G-LTE-BE	EHWIC-4G-LTE-BE is a dedicated Multimode LTE SKU for Canada, and is based on the Sierra Wireless MC7700 modem. EHWIC-4G-LTE-BE is backward compatible with these technologies: <ul style="list-style-type: none"> • UMTS • HSPA+ 	<ul style="list-style-type: none"> • LTE • UMTS • HSPA+ 	Canada	For LTE: AWS band 4 For UMTS/HSPA+: <ul style="list-style-type: none"> • 2100 MHz (band 1) • 1900 MHz (band 2) • 850 MHz (band 5)

Table 1 Cisco 4G EHWICs by Mode, Operating Region, and Frequencies

Cisco 4G EHWIC	Description	Mode	Operating Regions	Frequency Band
EHWIC-4G-LTE-AU	EHWIC-4G-LTE-AU is a dedicated Multimode LTE SKU for wireless networks in Australia and New Zealand. EHWIC-4G-LTE-AU comes with a Sierra Wireless MC7304 modem.	<ul style="list-style-type: none"> • LTE • HSPA+ • HSPA • UMTS • EDGE • GPRS 	Australia and New Zealand	<p>For LTE:</p> <ul style="list-style-type: none"> • 800 MHz (band 20) • 900 MHz (band 8) • 1800 MHz (band 3) • 2100 MHz (band 1) • 2600 MHz (band 7) <p>For UMTS/HSPA+/HSPA:</p> <ul style="list-style-type: none"> • 800 MHz (band 6) • 850 MHz (band 5) • 900 MHz (band 8) • 1900 MHz (band 2) • 2100 MHz (band 1) <p>For GSM/EDGE/GPRS:</p> <ul style="list-style-type: none"> • 850 MHz • 900 MHz • 1800 MHz • 1900 MHz
EHWIC-4G-LTE-GB	Dedicated Multimode LTE SKU for global Wireless networks. This comes with a Sierra Wireless MC7304 modem.	<ul style="list-style-type: none"> • LTE • HSPA+ • HSPA • UMTS • EDGE • GPRS 	Global (except Australia and New Zealand)	<p>For LTE:</p> <ul style="list-style-type: none"> • 800 MHz (band 20) • 900 MHz (band 8) • 1800 MHz (band 3) • 2100 MHz (band 1) • 2600 MHz (band 7) <p>For UMTS, HSPA+, HSPA:</p> <ul style="list-style-type: none"> • 800 MHz (band 6) • 850 MHz (band 5) • 900 MHz (band 8) • 1900 MHz (band 2) • 2100 MHz (band 1) <p>For GSM, EDGE, GPRS:</p> <ul style="list-style-type: none"> • 850 MHz • 900 MHz • 1800 MHz • 1900 MHz

Table 1-2 lists the different 4G LTE SKUs available for the Cisco 819HG and Cisco 819G ISRs.

Table 1-2 Supported 4G LTE SKUs for Cisco 819HG-4G and Cisco 819G-4G ISRs

SKU ID	Description	Mode	Operating Regions	Frequency Band
C819HG-4G-V-K9	C819HG-4G-V-K9 is a dedicated Multimode LTE SKU for Verizon Wireless networks and comes with a Sierra Wireless MC7750 modem. C819HG-4G-V-K9 is a hardened Cisco 819 Series Router.	LTE—DOOrA	North America	For LTE: 700 MHz (band 13) For CDMA 1xRTT, 1xEVDO Rev A: <ul style="list-style-type: none"> 800 MHz 1900 MHz
C819G-4G-V-K9	C819G-4G-V-K9 is a dedicated Multimode LTE SKU for Verizon Wireless networks and comes with a Sierra Wireless MC7750 modem. C819G-4G-V-K9 is a non-hardened Cisco 819 Series Router.	LTE—DOOrA	North America	For LTE: 700 MHz (band 13) For CDMA 1xRTT, 1xEVDO Rev A: <ul style="list-style-type: none"> 800 MHz 1900 MHz
C819HG-4G-A-K9	C819HG-4G-A-K9 is a dedicated Multimode LTE SKU for AT & T Wireless networks and comes with a Sierra Wireless MC7700 modem. C819HG-4G-A-K9 is a hardened Cisco 819 Series Router.	LTE—HSPA+/ HSPA/UMTS/ EDGE/GPRS	North America	For LTE: <ul style="list-style-type: none"> 700 MHz (band 17) AWS (band 4) 2100MHz (band 1) For UMTS/HSPA+/HSPA: <ul style="list-style-type: none"> 800 MHz 850 MHz 1900 MHz 2100 MHz For GSM/EDGE/GPRS: <ul style="list-style-type: none"> 850 MHz 900 MHz 1800 MHz 1900 MHz

Table 1-2 Supported 4G LTE SKUs for Cisco 819HG-4G and Cisco 819G-4G ISRs (continued)

SKU ID	Description	Mode	Operating Regions	Frequency Band
C819G-4G-A-K9	C819G-4G-A-K9 is a dedicated Multimode LTE SKU for AT&T Wireless networks and comes with a Sierra Wireless MC7700 modem. C819G-4G-A-K9 is a compact non-hardened Cisco 819 Series Router.	LTE—HSPA+/ HSPA/UMTS/ EDGE/GPRS	North America	For LTE: <ul style="list-style-type: none"> 700 MHz (band 17) AWS (band 4) 2100MHz (band 1) For UMTS/HSPA+/HSPA: <ul style="list-style-type: none"> 800 MHz 850 MHz 1900 MHz 2100 MHz For GSM/EDGE/GPRS: <ul style="list-style-type: none"> 850 MHz 900 MHz 1800 MHz 1900 MHz
C819HG-4G-G-K9	C819HG-4G-G-K9 is a dedicated Multimode LTE SKU for global wireless networks and comes with a Sierra Wireless MC7710 modem. C819HG-4G-G-K9 is a hardened Cisco 819 Series Router.	LTE—HSPA+/ HSPA/UMTS/ EDGE/GPRS	Global	For LTE: <ul style="list-style-type: none"> 800 MHz (band 20) 900 MHz (band 8) 1800 MHz (band 3) 2100MHz (band 1) 2600 MHz (band 7) For UMTS/HSPA+/HSPA: <ul style="list-style-type: none"> 900 MHz 2100 MHz For GSM/EDGE/GPRS: <ul style="list-style-type: none"> 900 MHz 1800 MHz 1900 MHz

Table 1-2 Supported 4G LTE SKUs for Cisco 819HG-4G and Cisco 819G-4G ISRs (continued)

SKU ID	Description	Mode	Operating Regions	Frequency Band
C819G-4G-G-K9	C819G-4G-G-K9 is a dedicated Multimode LTE SKU for global wireless networks and comes with a Sierra Wireless MC7710 modem. C819G-4G-G-K9 is a non-hardened Cisco 819 Series Router.	LTE—HSPA+/ HSPA/UMTS/ EDGE/GPRS	Global	For LTE: <ul style="list-style-type: none"> • 800 MHz (band 20) • 900 MHz (band 8) • 1800 MHz (band 3) • 2100MHz (band 1) • 2600 MHz (band 7) For UMTS/HSPA+/HSPA: <ul style="list-style-type: none"> • 900 MHz • 2100 MHz For GSM/EDGE/GPRS: <ul style="list-style-type: none"> • 900 MHz • 1800 MHz • 1900 MHz
C819G-4G-GA-K9	C819G-4G-GA-K9 is a dedicated Multimode LTE SKU for global wireless networks and comes with a Sierra Wireless MC7304 modem. C819G-4G-G-K9 is a non-hardened Cisco 819 Series Router.	LTE—HSPA+/ HSPA/UMTS/ EDGE/GPRS	Global (Europe, Australia and New Zealand)	For LTE: <ul style="list-style-type: none"> • 800 MHz (band 20) • 900 MHz (band 8) • 1800 MHz (band 3) • 2100MHz (band 1) • 2600 MHz (band 7) For UMTS/HSPA+/HSPA: <ul style="list-style-type: none"> • 800 MHz • 850 MHz • 1900 MHz • 2100 MHz For GSM/EDGE/GPRS: <ul style="list-style-type: none"> • 850 MHz • 900 MHz • 1800 MHz • 1900 MHz

[Table 3](#) lists the different 4G LTE SKUs available for the Cisco 880 and Cisco 890 series ISRs.

Table 3 Supported 4G LTE SKUs for the Cisco 880 and Cisco 890 Series ISRs

SKU ID	Mode	Operating Region	Frequency Band	Description
C881G-4G-GA-K9	<ul style="list-style-type: none"> • LTE • HSPA+ • HSPA • UMTS • EDGE • GPRS 	Global (Europe, New Zealand, and Australia)	LTE: <ul style="list-style-type: none"> • 800 MHz (band 20) • 900 MHz (band 8) • 1800 MHz (band 3) • 2100 MHz (band 1) • 2600 MHz (band 7) 3G (UMTS, HSPA+, HSPA): <ul style="list-style-type: none"> • 800 MHz (band 6) • 850 MHz (band 5) • 900 MHz (band 8) • 1900 MHz (band 2) • 2100 MHz (band 1) 2G (GSM, EDGE, GPRS): <ul style="list-style-type: none"> • 850 MHz • 900 MHz • 1800 MHz • 1900 MHz 	Cisco 880 Series ISR with Multimode LTE feature for global wireless networks. C881G-4G-GA-K9 comes with a Sierra Wireless MC7304 modem.
C887VAG-4G-GA-K9	<ul style="list-style-type: none"> • LTE • HSPA+ • HSPA • UMTS • EDGE • GPRS 	Global (Europe, New Zealand, and Australia)	LTE: <ul style="list-style-type: none"> • 800 MHz (band 20) • 900 MHz (band 8) • 1800 MHz (band 3) • 2100 MHz (band 1) • 2600 MHz (band 7) 3G (UMTS, HSPA+, HSPA): <ul style="list-style-type: none"> • 800 MHz (band 6) • 850 MHz (band 5) • 900 MHz (band 8) • 1900 MHz (band 2) • 2100 MHz (band 1) 2G (GSM, EDGE, GPRS): <ul style="list-style-type: none"> • 850 MHz • 900 MHz • 1800 MHz • 1900 MHz 	Cisco 880 series ISR with Multimode LTE feature for global wireless networks. C887VAG-4G-GA-K9 comes with a Sierra Wireless MC7304 modem.

Table 3 Supported 4G LTE SKUs for the Cisco 880 and Cisco 890 Series ISRs (continued)

SKU ID	Mode	Operating Region	Frequency Band	Description
C896VAG-LTE-GA-K9	<ul style="list-style-type: none"> • LTE • HSPA+ • HSPA • UMTS • EDGE • GPRS 	Global (Europe, New Zealand, and Australia)	LTE: <ul style="list-style-type: none"> • 800 MHz (band 20) • 900 MHz (band 8) • 1800 MHz (band 3) • 2100 MHz (band 1) • 2600 MHz (band 7) 3G (UMTS, HSPA+, HSPA): <ul style="list-style-type: none"> • 800 MHz (band 6) • 850 MHz (band 5) • 900 MHz (band 8) • 1900 MHz (band 2) • 2100 MHz (band 1) 2G (GSM, EDGE, GPRS): <ul style="list-style-type: none"> • 850 MHz • 900 MHz • 1800 MHz • 1900 MHz 	Cisco 890 series ISR with Multimode LTE feature for global wireless networks. C896VAG-LTE-GA-K9 comes with a Sierra Wireless MC7304 modem.
C897VAG-LTE-GA-K9	<ul style="list-style-type: none"> • LTE • HSPA+ • HSPA • UMTS • EDGE • GPRS 	Global (Europe, New Zealand, and Australia)	LTE: <ul style="list-style-type: none"> • 800 MHz (band 20) • 900 MHz (band 8) • 1800 MHz (band 3) • 2100 MHz (band 1) • 2600 MHz (band 7) 3G (UMTS, HSPA+, HSPA): <ul style="list-style-type: none"> • 800 MHz (band 6) • 850 MHz (band 5) • 900 MHz (band 8) • 1900 MHz (band 2) • 2100 MHz (band 1) 2G (GSM, EDGE, GPRS): <ul style="list-style-type: none"> • 850 MHz • 900 MHz • 1800 MHz • 1900 MHz 	Cisco 890 series ISR with Multimode LTE feature for global wireless networks. C897VAG-LTE-GA-K9 comes with a Sierra Wireless MC7304 modem.

Table 3 Supported 4G LTE SKUs for the Cisco 880 and Cisco 890 Series ISRs (continued)


SKU ID	Mode	Operating Region	Frequency Band	Description
C897VAMG-LTE-GA-K9	<ul style="list-style-type: none"> • LTE • HSPA+ • HSPA • UMTS • EDGE • GPRS 	Global (Europe, New Zealand, and Australia)	<p>LTE:</p> <ul style="list-style-type: none"> • 800 MHz (band 20) • 900 MHz (band 8) • 1800 MHz (band 3) • 2100 MHz (band 1) • 2600 MHz (band 7) <p>3G (UMTS, HSPA+, HSPA):</p> <ul style="list-style-type: none"> • 800 MHz (band 6) • 850 MHz (band 5) • 900 MHz (band 8) • 1900 MHz (band 2) • 2100 MHz (band 1) <p>2G (GSM, EDGE, GPRS):</p> <ul style="list-style-type: none"> • 850 MHz • 900 MHz • 1800 MHz • 1900 MHz 	Cisco 890 series ISR with Multimode LTE feature for global wireless networks. C897VAMG-LTE-GA-K9 comes with a Sierra Wireless MC7304 modem.

Table 3 Supported 4G LTE SKUs for the Cisco 880 and Cisco 890 Series ISRs (continued)

SKU ID	Mode	Operating Region	Frequency Band	Description
C898EAG-LTE-GA-K9	<ul style="list-style-type: none"> • LTE • HSPA+ • HSPA • UMTS • EDGE • GPRS 	Global (Europe, New Zealand, and Australia)	LTE: <ul style="list-style-type: none"> • 800 MHz (band 20) • 900 MHz (band 8) • 1800 MHz (band 3) • 2100 MHz (band 1) • 2600 MHz (band 7) 3G (UMTS, HSPA+, HSPA): <ul style="list-style-type: none"> • 800 MHz (band 6) • 850 MHz (band 5) • 900 MHz (band 8) • 1900 MHz (band 2) • 2100 MHz (band 1) 2G (GSM, EDGE, GPRS): <ul style="list-style-type: none"> • 850 MHz • 900 MHz • 1800 MHz • 1900 MHz 	Cisco 890 series ISR with Multimode LTE feature for global wireless networks. C898EAG-LTE-GA-K9 comes with a Sierra Wireless MC7304 modem.
C899G-LTE-GA-K9	<ul style="list-style-type: none"> • LTE • HSPA+ • HSPA • UMTS • EDGE • GPRS 	Global (Europe, New Zealand, and Australia)	LTE: <ul style="list-style-type: none"> • 800 MHz (band 20) • 900 MHz (band 8) • 1800 MHz (band 3) • 2100 MHz (band 1) • 2600 MHz (band 7) 3G (UMTS, HSPA+, HSPA): <ul style="list-style-type: none"> • 800 MHz (band 6) • 850 MHz (band 5) • 900 MHz (band 8) • 1900 MHz (band 2) • 2100 MHz (band 1) 2G (GSM, EDGE, GPRS): <ul style="list-style-type: none"> • 850 MHz • 900 MHz • 1800 MHz • 1900 MHz 	Cisco 890 series ISR with Multimode LTE feature for global Wireless networks. C899G-LTE-GA-K9 comes with a Sierra Wireless MC7304 modem.

Figure 1 explains the 4G LTE packet core network architecture.

Figure 1 4G LTE Packet Core Network Architecture

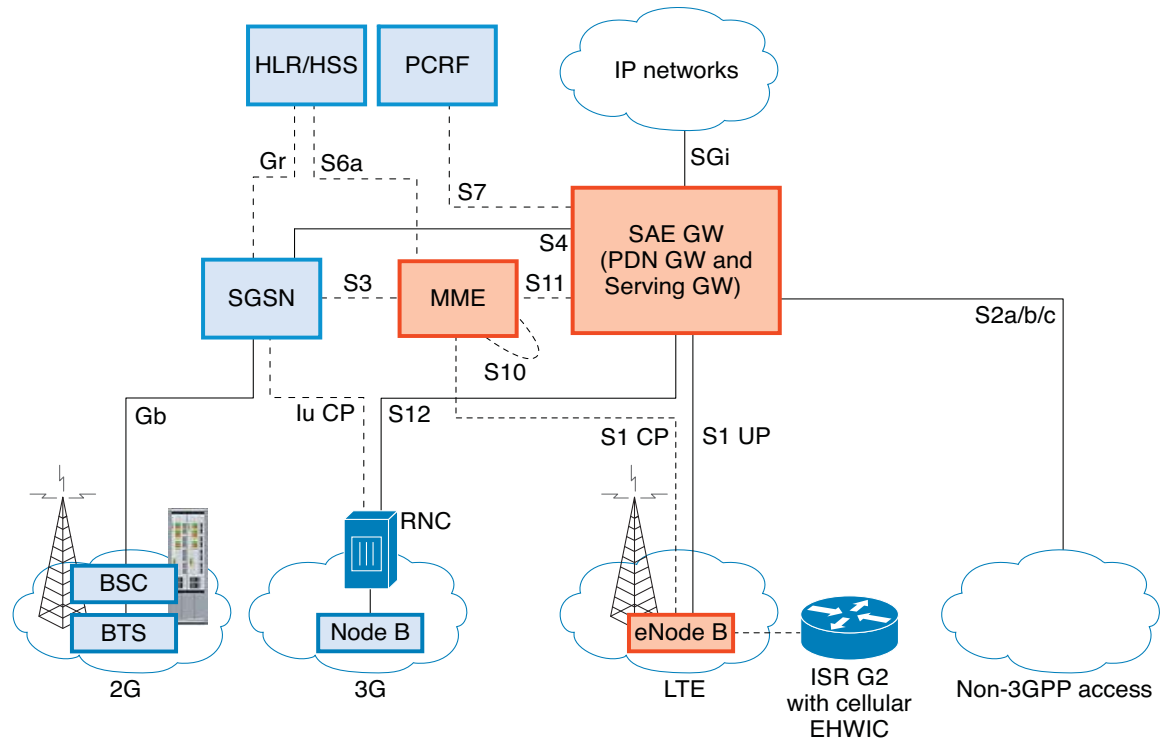

Gateways	<p>The Serving Gateway (SGW) routes and forwards user data packets, while also acting as the mobility anchor for the user plane, and is the anchor for mobility between LTE and other 3GPP technologies. The Packet Data Network (PDN) Gateway (PGW) provides connectivity from the User Equipment (UE) to external packet data networks by being the point of exit and entry of traffic for the UE.</p> <p>A UE may have simultaneous connectivity with more than one PGW for accessing multiple PDNs. The PGW performs policy enforcement, packet filtering for each user, charging support, lawful interception, and packet screening. Another key role of the PGW is to act as the anchor for mobility between 3GPP and non-3GPP technologies such as WiMAX and 3GPP2 (CDMA 1X and EvDO).</p> <p>The System Architecture Evolution GW (SAE GW) is the entity that covers the PGW and SGW functionality in the Evolved Packet Core (EPC).</p>
RNC	<p>The Radio Network Controller (RNC) is responsible for controlling the Radio Access Network (RAN) that are connected to it. The RNC carries out radio resource management and some of the mobility management functions and is the point where encryption is done before user data is sent to and from the mobile. The RNC connects to the Circuit-Switched Core Network through the Media Gateway (MGW).</p>
BTS	Base Transceiver Station.
BSC	Base Station Controller.
SGSN	Service GPRS Support Node.

Prerequisites for Configuring Cisco 4G LTE

- You must have 4G LTE network coverage where your router is physically placed. For a complete list of supported carriers, see the product data sheet.
- You must subscribe to a service plan with a wireless service provider and obtain a Subscriber Identity Module (SIM) card.
- You must install the SIM card before configuring the 4G LTE Wireless WAN EHWIC or Cisco 819 router. For instructions on how to install the SIM card, see the [Configuring a SIM for Data Calls, page 31](#) for more information.
- The standalone antenna that supports GPS capabilities must be installed for the GPS feature to work. See the [Cisco 4G Indoor/Outdoor Active GPS Antenna \(GPS-ACT-ANTM-SMA\)](#) document for installation information.
- Both GPS and NMEA features must be configured for GPS coordinates to be obtained.

Restrictions for Configuring Cisco 4G LTE

Follow these restrictions and usage guideline while configuring Cisco 4G LTE:

- Currently, cellular networks support only user initiated bearer establishment.
- Due to the shared nature of wireless communications, the experienced throughput varies depending on the number of active users or congestion in a given network.
- Cellular networks have higher latency compared to wired networks. Latency rates depend on the technology and carrier. Latency may be higher because of network congestion. Latency also depends on the signal conditions and can be higher because of network congestion.
- Public Land Mobile Network (PLMN) feature is not supported.
- Any restrictions that are part of the terms of service from your carrier.
- SMS—Only one text message up to 160 characters to one recipient at a time is supported. Larger texts are automatically truncated to the proper size before being sent.
- For the router that runs the SNMP agent, you must configure appropriate access control (for example, SNMP-server community) using the Cisco IOS CLI for the NMS and agent to work properly.
- It is strongly recommended that you configure SNMP V3 with authentication/privacy when implementing SNMP SET operation.

Cisco 4G LTE Features

Cisco 4G LTE WWAN EHWICs, Cisco 819 Series 4G LTE ISRs, Cisco C880 Series 4G LTE ISRs, and Cisco C890 Series 4G LTE ISRs support the following major features:

- Global Positioning System (GPS) and National Marine Electronics Association (NMEA) streaming.
- 4G Short Message Service (SMS)
- 3G/4G Simple Network Management Protocol (SNMP) MIB
- Auto-switch failover between primary and backup link
- Multichannel-interface-processor (MIP) profile configuration

- Remotely initiated data callback using voice
- Remotely initiated data callback using Short Message Service (SMS)
- Remote firmware upgrade over 4G LTE
- Virtual diagnostic monitoring
- Mobile Equipment Personalization (MEP) lock and unlock capabilities
- SIM lock and unlock capabilities

4G GPS and NMEA

Effective with Cisco IOS Release 15.3(3)M and later releases, the Global Positioning System (GPS) feature is enabled by default on the supported Cisco 819 Series 4G LTE ISRs and Cisco 4G LTE EHWICs to provide the geographical location. GPS is also enabled by default on Cisco C880 Series and Cisco C890 Series 4G LTE ISRs.

Active GPS is supported on the SubMiniature version A (SMA) port. Active GPS antenna is supported only in the standalone mode. An Active GPS antenna includes a built-in Low-Noise Amplifier that provides sufficient gain to overcome coaxial cable losses while providing the proper signal level to the GPS receiver. Active GPS antennae require power from the GPS receiver SMA port to operate. See the [“Example: Connecting to a Server Hosting a GPS Application”](#) section on page 21 for more information.

National Marine Electronics Association (NMEA) streams GPS data either from a 4G EHWIC or a Cisco 819 ISR through a virtual COM port and a TCP/IP Ethernet connection to any marine device (such as a Windows-based PC) that runs a commercially available GPS-based application.

The following GPS and NMEA features are supported on the Cisco 4G LTE EHWICs, Cisco 819 Series 4G LTE ISRs, Cisco C880 Series 4G LTE ISRs, and Cisco C890 Series 4G LTE ISRs.

- GPS standalone mode (satellite-based GPS).
- Cisco IOS CLI display coordinates.
- Virtual and physical serial ports can export NMEA-formatted GPS data.
- External application displays router map location.
- Objects in the CISCO-WAN-3G-MIB supports GPS and NMEA features.
- The Cisco 4G LTE EHWIC supports only the IP NMEA streaming option.
- The Cisco 819 Series 4G LTE ISRs, Cisco C880 Series 4G LTE ISRs, and Cisco C890 Series 4G LTE ISRs can support either IP or serial NMEA streaming options.



Note

Assisted GPS mode is not supported.

For instructions on setting up the GPS antenna, see the [Cisco 4G Indoor/Outdoor Active GPS Antenna \(GPS-ACT-ANTM-SMA\)](#) document.

Example: Connecting to a Server Hosting a GPS Application

You can feed the NMEA data to a remote server that hosts the GPS application. The server can be connected to the router either directly using an Ethernet cable or through a LAN or WAN network. If the application supports serial port, run a serial port emulation program to create a virtual serial port over the LAN or WAN connection.

**Note**

Microsoft Streets & Trips is a licensed software that you can download from the Microsoft website.

To connect a Cisco 819 ISR through IP to a PC running Microsoft Streets & Trips, perform the following steps:

- Step 1** Connect the PC to the router using an Ethernet cable.
- Step 2** Ensure that the PC and router can ping.
- Step 3** Launch the serial port redirector on the PC.
- Step 4** Use the **show line** command in the privileged EXEC mode to locate the NMEA port on the router.
- Step 5** Create a virtual serial port that connects to the NMEA port on the router.
- Step 6** Launch **Microsoft Streets & Trips** on your PC.
- Step 7** Select the **GPS Menu**.
- Step 8** Click **Start Tracking**.
- Step 9** If you have acquired a location fix from the **show cellular gps** command output on the router, the current location is plotted on the graph, and a reddish brown dotted cursor with a circle around it is seen on the map.

**Note**

If you have not acquired a location fix, the Microsoft application times out and disconnects.


Short Message Service (SMS) Capabilities

Cisco 4G LTE EHWICs, Cisco 819 Series 4GLTE ISRs, Cisco C880 Series 4G LTE ISRs, and Cisco C890 Series 4G LTE ISRs support receiving, transmitting, archiving, and deleting of SMS messages. This support includes the ability to view up to 25 received texts, and archive more messages in a custom file location. SMS is supported on multiple carriers. Cisco 4G LTE EHWICs, Cisco 819 Series 4GLTE ISRs, Cisco C880 Series 4G LTE ISRs, and Cisco C890 Series 4G LTE ISRs also have the capability to revert from LTE SMS to 3G and 2G SMS technology if necessary.

A sending device behind a Cisco 4G LTE ISR transmits an SMS text message over the 4G cellular link through cellular towers until it the message reaches the recipient's router, which then notifies the recipient device, such as a cell phone. The receiving device uses the same process to return a reply to the sending device. [Figure 2](#) describes the flow from a mobile device to a sending device. For SMS transmission to work, end users must have a text-capable device, and optionally, a text plan. If end users do not have a text plan, standard SMS rates apply to their text transmissions.

The SMS-initiated Data Callback feature allows customers to set up a data connection by sending a text message to the Cisco 4G LTE ISR and includes the message screening functionality using the originating number to improve feature security and eliminate unauthorized callback requests.

Figure 2 SMS Network

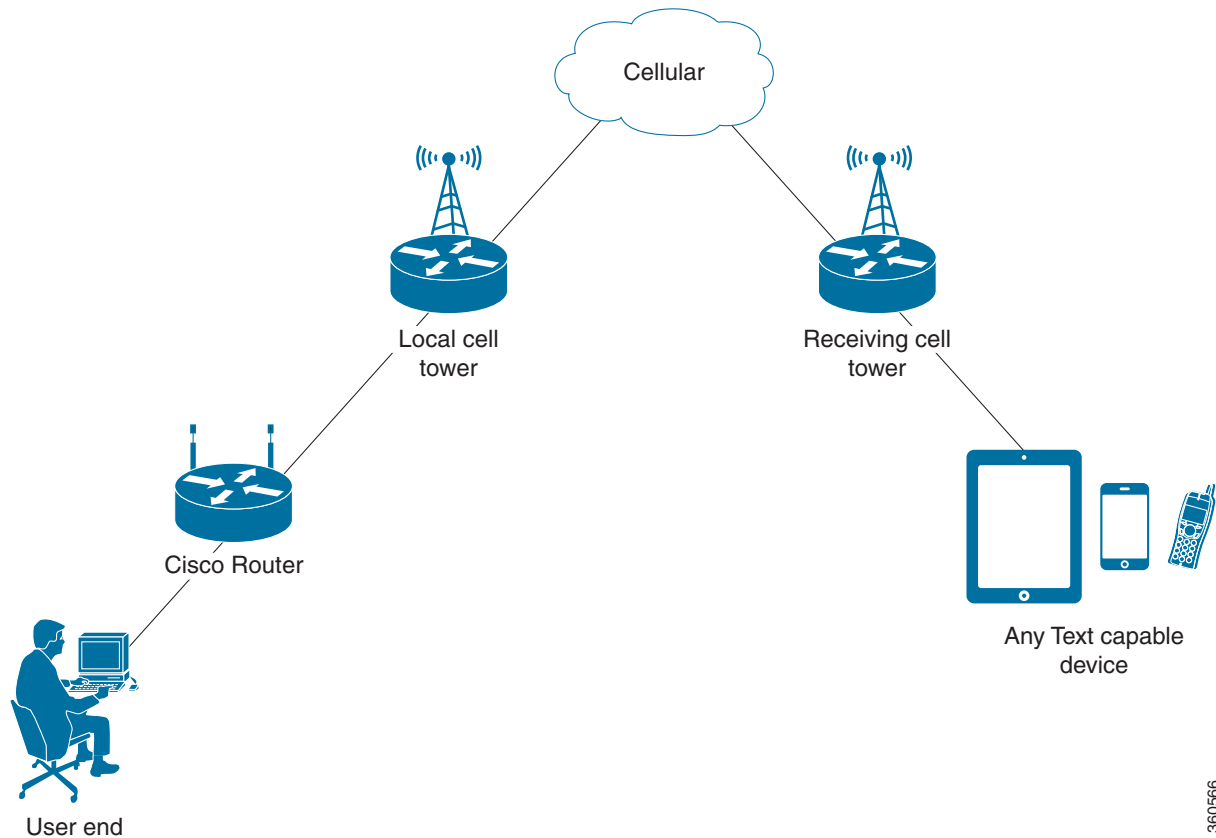

360566

Using a SIM Card

Cisco 4G LTE EHWICs, Cisco 819 Series 4GLTE ISRs, Cisco C880 Series 4G LTE ISRs, and Cisco C890 Series 4G LTE ISRs need an active SIM card provided by a service provider. The SIM cards are usually provided in an unlocked state so that it can be used without a Personal Identification Number (PIN). If the SIM is unlocked, it can be inserted into an EHWIC and used without an authorization code.

The SIM can be initially locked with a PIN code (4 to 8 digits long) defined by the service provider. Contact your service provider for the PIN code.

The SIM-Lock feature allows a SIM to be locked or unlocked with a PIN code so that it is used only in an authorized device. Perform the SIM lock and unlock procedures using the Cisco IOS CLI through a console or Telnet/SSH to the ISR.

After the SIM is locked, it cannot initiate a call unless authentication is done using the same PIN. Authentication is done automatically by Cisco IOS through configuration of the PIN. This mandatory configuration for automatic SIM authentication is done using the Cisco IOS CLI as part of the router startup configuration.

After the Cisco IOS configuration is in place, the ISR can initiate an LTE connection. The ISR uses the configured PIN to authenticate prior to the LTE connection. If the Cisco IOS PIN configuration is missing or if the PIN is incorrect, the SIM authentication will fail and the connection will not be initiated.

If the locked SIM is moved to a different ISR or to another device, or if the EHWIC in which the locked SIM resides is moved to a different EHWIC slot in the same ISR, the ISR configuration should be changed. The configuration is associated with the cellular controller that is specific to an ISR EHWIC slot number. This will ensure that the SIM card will not be used in any unauthorized device, or, if there are multiple LTE EHWICs in a single ISR, that the appropriate PIN is applied to each LTE EHWIC/SIM. An authentication command (with the same PIN used to lock the SIM) must be defined on the new device or on the new cellular controller slot to successfully initiate the LTE connection.

The following procedures are used to configure a SIM:

- [Locking and Unlocking a SIM Card Using a PIN Code, page 32](#)
- [Applying a Modem Profile in a SIM Configuration, page 36](#)

**Caution**

It is very important to use the correct PIN after it is configured. The SIM card will be blocked if the wrong PIN is entered three consecutive times on a locked SIM during authentication or when trying to unlock a locked SIM.

You can unblock a blocked SIM card using the PUK code. Contact your service provider for the PUK code.

Use the **cellular <slot> lte sim unblock <PUK code> <new PIN code>** command to unblock the SIM.

Data Account Provisioning

One or more modem data profiles can be created to provision a modem on a 3G or 4G EHWIC. An active wireless account with a service provider with one or more (dual) SIM cards must be installed. The modem data profile is pre-configured on the modem.

The following tasks are used to verify the signal strength and service availability of the modem and to create, modify, and delete modem data profiles:

- [Verifying Modem Signal Strength and Service Availability, page 27](#)
- [Creating, Modifying, or Deleting Modem Data Profiles, page 28](#)

IP Multimedia Subsystem Profiles

IP Multimedia Subsystem (IMS) profiles establish a session, and are a part of the modem configuration and are stored in the modem's NVRAM. An IMS network is an access-independent and standard-based IP connectivity service that enables different types of multimedia services to end users using common Internet-based protocols. See “[Creating, Modifying, or Deleting Modem Data Profiles](#)” section on [page 28](#), for more information.

4G LTE LEDs

[Table 4](#) describes 4G LTE EHWIC and 819 ISR LED behavior:

Table 4 4G LTE LED Descriptions

LED	Color	Description
SYS	Yellow	FPGA download is complete.
	Green (blinking)	ROMMON is operational.
	Green (solid)	Cisco IOS is operational.
	Green (four blinks during bootup)	Reset button has been pushed during the bootup.
	Off	After powering up, when FPGA is being downloaded (in ROMMON).
ACT	Green	Network activity on FE switch ports, GE WAN port, 3G cellular interface, and serial interfaces.
	Off	No network connectivity.
WWAN	Green	Module is powered on and connected, but is not transmitting or receiving.
	Green (slow blinking)	Module is powered on and searching for connection.
	Green (fast blinking)	Module is transmitting or receiving.
	Off	Module is not powered.
GPS - EHWIC	Green (solid)	GPS coordinates are obtained.
	Off	GPS is disabled, GPS is enabled without GPS mode and NMEA configuration, or GPS is acquiring.
GPS - 819 ISR	Green (solid)	GPS coordinates are obtained.
	Green (blinking)	GPS is acquiring.
	Off	GPS is disabled or GPS is enabled without GPS mode and NMEA configuration.
RSSI	Green (solid)	Signal > -60 dBm Very strong signal
	Green (three blinks and then a long pause)	Signal <= -60 to 74 dBm Strong signal
	Green (two blinks and then a long pause)	Signal <= -75 to 89 dBm Fair signal
	Green (one blink and then a long pause)	Signal <= -90 to 109 dBm Marginal signal
	Off	Signal <= -110 dBm Unusable signal

Table 4 4G LTE LED Descriptions (continued)

LED	Color	Description
SIM	Green / Yellow (one green blink followed by two yellow blinks)	SIM in slot 0 is active, SIM in slot 1 is not.
	Yellow / Green (one yellow blink followed by two green blinks)	SIM in slot 1 is active, SIM in slot 0 is not.
	Off / Green (two green blinks and then a pause)	No SIM in slot 0, SIM present in slot 1.
	Green / Off (slow single green blink and then a pause)	SIM present in slot 0, no SIM in slot 1.
	Off / Off	No SIM present in either slots.
3G/4G	Green (one blink and then a pause)	For 1xRTT, EGPRS, or GPRS service.
	Green (two blinks and then a pause)	For EVDO, EVDO/1xRTT, or UMTS service.
	Green (three blinks and then a pause)	For EVDO/1xRTT RevA, HSPA, or HSUPA/HSDPA service.
	Green (four blinks and then a pause)	For HSPA+ service.
	Green (Solid)	For 4G/LTE service.
	Off	No service.

For information on 4G LTE LEDs on Cisco C880 and Cisco C890 Series 4G LTE ISRs, see the following link:

<http://www.cisco.com/c/en/us/td/docs/routers/access/800/hardware/installation/guide/800HIG/prodoverview.html#pgfId-1181416>

How to Configure Cisco 4G LTE



Note

For 4G-LTE EHWICs, the numbering for slot 0, wic 0, and port 0 is 0/0/0 for all commands. For Cisco 800 Series 4G LTE fixed platforms, use slot “0” for all commands.

- [Verifying Modem Signal Strength and Service Availability, page 27](#)
- [Creating, Modifying, or Deleting Modem Data Profiles, page 28](#)
- [Configuring a SIM for Data Calls, page 31](#)
- [Data Call Setup, page 40](#)
- [Enabling 4G GPS and NMEA Data Streaming, page 47](#)
- [Configuring 4G SMS Messaging, page 51](#)

Verifying Modem Signal Strength and Service Availability


Note

For the EHWIC, the *unit* argument identifies the router slot, WIC slot, and port separated by slashes (0/0/0). For the Cisco 800 Series 4G LTE ISRs, the *unit* argument identifies slot “0” for all commands.

SUMMARY STEPS

1. `show cellular unit network`
2. `show cellular unit radio`
3. `show cellular unit profile`
4. `show cellular unit security`
5. `show cellular unit all`

DETAILED STEPS

	Command or Action	Purpose
Step 1	<code>show cellular unit network</code> Example: Device# <code>show cellular 0/0/0 network</code>	Displays information about the carrier network, cell site, and available service.
Step 2	<code>show cellular unit radio</code> Example: Device# <code>show cellular 0/0/0 radio</code>	Shows the radio signal strength. Note The RSSI should be better than -90 dBm for steady and reliable connection.
Step 3	<code>show cellular unit profile</code> Example: Device# <code>show cellular 0/0/0 profile</code>	Shows information about the modem data profiles created.
Step 4	<code>show cellular unit security</code> Example: Device# <code>show cellular 0/0/0 security</code>	Shows the security information for the modem, such as SIM and modem lock status.
Step 5	<code>show cellular unit all</code> Example: Device# <code>show cellular 0/0/0 all</code>	Shows consolidated information about the modem, profiles created, radio signal strength, network security, and so on.

Creating, Modifying, or Deleting Modem Data Profiles

You can create multiple profiles on Cisco 4G LTE EHWICs, Cisco 819 Series 4G LTE ISRs, Cisco C880 Series 4G LTE ISRs and Cisco C890 Series 4G LTE ISRs. The following are the default Internet profile numbers for some of the modems:

- MC7700—Profile 1
- MC7710—Profile 1
- MC7750—Profile 3
- MC7304—Profile 1

For information on supported modems on each SKU, see [Table 1](#), [Table 1-2](#), and [Table 3](#).

Usage Guidelines for Creating, Modifying, or Deleting Data Profiles

Follow these guidelines while you configure a data profile:

- In most cases, you do not have to make any profile-related changes if your modem comes with a data profile, for instance, AT&T, Sprint and Verizon.
- If any profile parameter changes are required for a connection type, the changes will most likely be carried out in the default profiles.
- To configure different profile types and use them for a different connection, you can create separate profiles with different parameters (for instance, APN names). Note that only one profile is active at a given time.
- Use the **show cellular <> profile** command to view the data profile. An asterisk(*) is displayed against the data profile.
- The data profile is used to set up a data call. If you want to use a different profile, that profile needs to be made the default one. Use the **lte sim data-profile number** command to change the default profile.
- To verify the completed sets of 3GPP and 3GPP2 profiles, enable the **debug cellular <0/x/0> message profile** command and then enter the **show cellular 0 profile** command. This debug command is applicable for 4G LTE SKUs with MC7750 modem.



Note

If you are using the MC7750(EHWIC-LTE-4G-V and C819-LTE-4G-V), avoid modifying the *ims* profile (Profile 1 displayed in the **show** command with a ** against it). Typically, you have to modify Profile 3 for an APN update.



Note

For the EHWIC, the *unit* argument identifies the router slot, WIC slot, and port separated by slashes (0/0/0). For the Cisco 800 Series 4G LTE ISRs, the *unit* argument identifies slot “0” for all commands.

SUMMARY STEPS

1. **cellular unit lte profile [create | delete] profile-number [apn [authentication [username password [bearer-type]]]]**

DETAILED STEPS

	Command or Action	Purpose
Step 1	<pre>cellular unit lte profile [create delete] profile-number [apn [authentication [username password [bearer-type]]]]</pre> <p>Example: Device# cellular 0/0/0 lte profile create 2 apn.com pap username pwd ipv4</p>	<p>Creates, modifies, or deletes a modem data profile in the privileged EXEC mode.</p> <ul style="list-style-type: none"> The <i>profile-number</i> argument specifies the profile number created for the modem. The maximum number of profiles that can be created for each modem is given as follows: <ul style="list-style-type: none"> MC7700—Up to 16 profiles MC 7710—Up to 16 profiles MC7750—Up to 6 profiles MC7304—Up to 16 profiles (Optional) The <i>apn</i> argument specifies an Access Point Name (APN) in the profile. An APN is provided by your service provider. Only a single APN can be specified in a single profile. (Optional) The <i>authentication</i> parameter specifies the authentication type used. Acceptable parameters are chap, none (no authentication), pap, and pap_chap (PAP or CHAP authentication). (Optional) The <i>username</i> and <i>password</i> arguments are given by a service provider. (Optional) The <i>bearer-type</i> parameter specifies the type of data payload exchanged over the air link when the packet data session is established with this profile. Acceptable data type parameters are: ipv4, ipv6, and ipv4v6 (IPv4 and IPv6). <p>Note Entering this command results in the creation or modification of both the 3GPP and 3GPP2 profiles with the same parameters for the MC7750 modem.</p> <p>Note The default data profile numbers for the various modem SKUs are given as follows:</p> <ul style="list-style-type: none"> MC7700, MC7710, MC7304 – Profile 1 MC7750– Profile 3 <p>The data profile is displayed by using the show cellular unit profile command with an asterisk(*).</p>

Configuration Examples

The following example shows how to change a default profile on EHWIC-4G-LTE-A:


```

router(config-controller)# lte sim data-profile 2 attach-profile 1
router(config-controller)# end
router#
router# sh run
Building configuration...
controller Cellular 0/1
  lte sim profile 2
router# ping 8.8.4.4 rep 10
Type escape sequence to abort.
Sending 10, 100-byte ICMP Echos to 8.8.4.4, timeout is 2 seconds:
!!!!!!!!!!!!
Success rate is 100 percent (10/10), round-trip min/avg/max = 284/364/600 ms
router#

```

The following example shows the output of the **show cellular** command:

```

router# show cellular 0/1/0 profile
Profile 1 = INACTIVE **
-----
PDP Type = IPv4
Access Point Name (APN) = Broadband
Profile 2 = ACTIVE*
-----
PDP Type = IPv4
PDP address = 10.176.207.8
Access Point Name (APN) = Broadband
  Primary DNS address = 172.26.38.1
  Secondary DNS address = 172.26.38.2
  * - Default profile
  ** - LTE attach profile

```

The following example shows the output of the **show cellular** command before you enable the debug command:

```

router# show cellular 0/0/0 profile
Profile 1 = INACTIVE **
-----
PDP Type = IPv6
Access Point Name (APN) = vzwims
Profile 2 = INACTIVE
-----
PDP Type = IPv4v6
Access Point Name (APN) = vzwadmin
Profile 3 = ACTIVE*
-----
PDP Type = IPv4v6
PDP address = 10.187.130.3
Access Point Name (APN) = VZWINTERNET
  Primary DNS address = 198.224.173.135
  Secondary DNS address = 198.224.174.135
Profile 4 = INACTIVE
-----
PDP Type = IPv4v6
Access Point Name (APN) = vzwapp

  * - Default profile /* Note
  ** - LTE attach profile /* note

```

The following example shows the output of the **show cellular** command after you enable the debug command:

```

router# debug cellular 0/0/0 messages profile

```

```

PROFILE_3GPP2 debugging is on
router#
router #show cellular 0/0/0 profile
Profile 1 = INACTIVE **
-----
PDP Type = IPv6
Access Point Name (APN) = vzwims
Profile 2 = INACTIVE
-----
PDP Type = IPv4v6
Access Point Name (APN) = vzwadmin
Profile 3 = ACTIVE*
-----
PDP Type = IPv4v6
PDP address = 10.187.130.3
Access Point Name (APN) = VZWINTERNET
    Primary DNS address = 198.224.173.135
    Secondary DNS address = 198.224.174.135
Profile 4 = INACTIVE
-----
PDP Type = IPv4v6
Access Point Name (APN) = vzwapp

3GPP2 Profiles:
=====
Profile 1 = INACTIVE
-----
PDN Type = IPv6
Access Point Name (APN) = vzwims
Profile 2 = INACTIVE
-----
PDN Type = IPv4v6
Access Point Name (APN) = vzwadmin
Profile 3 = INACTIVE*
-----
PDN Type = IPv4v6
Access Point Name (APN) = VZWINTERNET
Profile 4 = INACTIVE
-----
PDN Type = IPv4v6
Access Point Name (APN) = vzwapp

Profile 5 = INACTIVE
-----
PDN Type = IPv4v6
Access Point Name (APN) =
Profile 6 = INACTIVE
-----
PDN Type = IPv4v6
Access Point Name (APN) =
    * - Default profile
    ** - LTE attach profile

```

Configuring a SIM for Data Calls

- [Locking and Unlocking a SIM Card Using a PIN Code, page 32](#)
- [Changing the PIN Code, page 32](#)
- [Verifying the Security Information of a Modem, page 33](#)
- [Configuring an Encrypted PIN for a SIM, page 34](#)

- [Applying a Modem Profile in a SIM Configuration, page 36](#)
- [Applying a Modem Profile in a SIM Configuration, page 36](#)
- [Configuring a Dual SIM, page 37](#)

Locking and Unlocking a SIM Card Using a PIN Code

Perform this task to lock or unlock a SIM card given by your service provider.



Caution

The SIM card gets blocked if the wrong PIN is entered three consecutive times. Make sure you enter the correct PIN the SIM is configured with. If your SIM card gets blocked, contact your service provider for a PUK code. Using the PUK code, you can unblock the SIM card.



Note

For the EHWIC, the *unit* argument identifies the router slot, WIC slot, and port separated by slashes (0/0/0). For the Cisco 800 Series 4G LTE ISRs, the *unit* argument identifies slot “0” for all commands.

SUMMARY STEPS

1. `cellular unit lte sim {lock | unlock} pin`

DETAILED STEPS

	Command or Action	Purpose
Step 1	<code>cellular unit lte sim {lock unlock} pin</code> Example: Device# <code>cellular 0/0/0 lte sim lock 1111</code>	Locks or unlocks the SIM card using a PIN code. <ul style="list-style-type: none"> • <i>pin</i>—A code (4 to 8 digits long) provided by your carrier to lock or unlock the SIM card.

Changing the PIN Code

Perform this task to change the PIN code of a SIM.



Note

For the EHWIC, the *unit* argument identifies the router slot, WIC slot, and port separated by slashes (0/0/0). For the Cisco 800 Series 4G LTE ISRs, the *unit* argument identifies slot “0” for all commands.

SUMMARY STEPS

1. `cellular unit lte sim change-pin pin new-pin`

DETAILED STEPS

	Command or Action	Purpose
Step 1	<pre>cellular unit lte sim change-pin pin new-pin</pre> <p>Example: Device# cellular 0/0/0 lte sim change-pin 1111 1234</p>	Changes the assigned PIN code. SIM should be in locked state when the PIN is being changed.

Verifying the Security Information of a Modem

Perform this task to verify the security information of a modem.

**Note**

For the EHWIC, the *unit* argument identifies the router slot, WIC slot, and port separated by slashes (0/0/0). For the Cisco 800 Series 4G LTE ISRs, the *unit* argument identifies slot “0” for all commands.

SUMMARY STEPS

1. `show cellular unit security`

DETAILED STEPS

	Command or Action	Purpose
Step 1	<pre>show cellular unit security</pre> <p>Example: Device# show cellular 0/0/0 security</p>	Shows the security information of the modem, including the SIM lock status.

Configuring Automatic Authentication for a Locked SIM

An unencrypted PIN can be configured to activate the Card Holder Verification (CHV1) code that authenticates a modem.

**Caution**

The SIM card gets blocked if the wrong PIN is entered three consecutive times. Make sure you enter the correct PIN the SIM is configured with. If your SIM card gets blocked, contact your service provider for a PUK code.

**Note**

Follow these procedures when using an unencrypted Level 0 PIN to configure CHV1. For instructions on how to configure CHV1 using an encrypted Level 7 PIN, see the [“Configuring an Encrypted PIN for a SIM”](#) section on page 34.

**Note**

A SIM should be locked for SIM authentication to work. To verify the SIM’s status, use the `show cellular unit security` command.

**Note**

For the EHWIC, the *unit* argument identifies the router slot, WIC slot, and port separated by slashes (0/0/0). For the Cisco 800 Series 4G LTE ISRs, the *unit* argument identifies slot “0” for all commands.

SUMMARY STEPS

1. **configure terminal**
2. **controller cellular *unit***
3. **lte sim authenticate 0 *pin***
or
lte sim authenticate 0 *pin slot* {0 | 1}

DETAILED STEPS

	Command or Action	Purpose
Step 1	configure terminal Example: Device# configure terminal	Enters global configuration mode.
Step 2	controller cellular <i>unit</i> Example: Device(config)# controller cellular 0/0	Enters the cellular controller configuration mode.
Step 3	For the Cisco 4G EHWICs that do not support dual SIM feature: lte sim authenticate 0 <i>pin</i> For the Cisco 800 Series 4G LTE ISRs with dual SIM feature: lte sim authenticate 0 <i>pin slot</i> {0 1} Example: Device(config-controller)# lte sim authenticate 0 1111	Authenticates the SIM CHV1 code by using an unencrypted (0) keyword and PIN. This PIN is sent to the modem for authentication with each subsequent LTE connection. If authentication passes based on the configured PIN, the data call is allowed. If authentication fails, the modem does not initiate the data call. Note This command is valid only when an unencrypted PIN is used. To configure CHV1 code using an encrypted PIN, see the “Configuring an Encrypted PIN for a SIM” section on page 34. Note The slot keyword and its options are only available on Cisco 800 Series 4G LTE ISRs which supports the dual SIM feature.

Configuring an Encrypted PIN for a SIM

To configure an encrypted PIN, the scrambled value of the PIN must be obtained. To get the scrambled Level 7 PIN and to configure the SIM CHV1 code for verification using this encrypted PIN, enter the following commands in the EXEC mode.

**Note**

When obtaining the encrypted PIN for a SIM, a username and password are created by configuring password encryption, defining the username and associated password, copying the resulting scrambled password, and using this scrambled password in the SIM authentication command. After the scrambled PIN has been obtained and used in SIM authentication, the username created can be deleted from the Cisco IOS configuration.

**Note**

A SIM should be locked for SIM authentication to work. To verify the SIM's status, use the **show cellular unit security** command.

**Note**


For the EHWIC, the *unit* argument identifies the router slot, WIC slot, and port separated by slashes (0/0/0). For the Cisco 800 Series 4G LTE ISRs, the *unit* argument identifies slot "0" for all commands.

SUMMARY STEPS

1. **configure terminal**
2. **service password-encryption**
3. **username *name* privilege 0 password *pin***
4. **do show run | i *name***
5. **controller cellular *unit***
6. **lte sim authenticate {0 | 7} *pin***
or
lte sim authenticate {0 | 7} *pin* slot {0 | 1}
7. **exit**
8. **no username *name***
9. **no service password-encryption**

DETAILED STEPS

	Command or Action	Purpose
Step 1	configure terminal Example: Device# configure terminal	Enters global configuration mode.
Step 2	service password-encryption Example: Device(config)# service password-encryption	Enables password encryption.

	Command or Action	Purpose
Step 3	<pre>username name privilege 0 password pin</pre> <p>Example: Device(config)# username SIM privilege 0 password 1111</p>	<p>Creates username and password.</p> <ul style="list-style-type: none"> <i>name</i>—Specifies the username. <i>pin</i>—Specifies the four- to eight-digit PIN code.
Step 4	<pre>do show run i name</pre> <p>Example: Device(config)# do show run i SIM</p>	<p>Shows the username configuration line with the encrypted level 7 PIN for the username created in Step 3 (user “SIM” in the example shown).</p> <p>Copy the scrambled password for use in Step 6 (as the PIN).</p>
Step 5	<pre>controller cellular unit</pre> <p>Example: Device(config)# controller cellular 0/0</p>	<p>Enters the cellular controller configuration mode.</p>
Step 6	<p>For Cisco 4G LTE WWAN EHWICs:</p> <pre>lte sim authenticate {0 7} pin</pre> <p>For the Cisco 819(H)G-4G-G ISR that supports dual SIM feature:</p> <pre>lte sim authenticate {0 7} pin slot {0 1}</pre> <p>Example: Device(config-controller)# lte sim authenticate 7 055A575E70</p>	<p>Authenticates the SIM CHV1 code by using the encrypted keyword 7 and the scrambled PIN from Step 4. The PIN is sent to the modem for authentication with each subsequent LTE connection. If authentication passes based on the configured PIN, the data call is allowed. If authentication fails, the modem does not initiate the data call.</p> <p> Note The slot keyword and its options are available only on Cisco 800 Series 4G LTE ISRs which supports the dual SIM feature.</p>
Step 7	<pre>exit</pre> <p>Example: Device(config-controller)# exit</p>	<p>(Optional) Exits the cellular controller configuration mode.</p>
Step 8	<pre>no username name</pre> <p>Example: Device(config)# no username SIM</p>	<p>(Optional) Removes the username and password created in Step 3.</p>
Step 9	<pre>no service password-encryption</pre> <p>Example: Device(config)# no service password-encryption</p>	<p>(Optional) Disables password encryption.</p>


Applying a Modem Profile in a SIM Configuration

SUMMARY STEPS

1. `configure terminal`
2. `controller cellular unit`

3. `lte sim data-profile number attach-profile number`
or
`lte sim data-profile number attach-profile number slot {0 | 1}`

DETAILED STEPS

	Command or Action	Purpose
Step 1	<code>configure terminal</code> Example: Device# <code>configure terminal</code>	Enters the global configuration mode.
Step 2	<code>controller cellular unit</code> Example: Device(config)# <code>controller cellular 0/0</code>	Enters the cellular controller configuration mode.
Step 3	For the Cisco 4G EHWICs that do not support dual SIM feature: <code>lte sim data-profile number attach-profile number</code> For the Cisco 800 Series 4G LTE ISRs with dual SIM feature: <code>lte sim profile number attach-profile number slot {0 1}</code> Example: Device(config-controller)# <code>lte sim data-profile 2 attach-profile 1 slot 0</code> Device(config-controller)# <code>lte sim data-profile 3 attach-profile 1 slot 1</code>	(All MC77xx modems) Applies the configured profile number to the SIM and its slot number. The default (primary) slot is 0. The attach profile is the profile used by the modem to attach to the LTE network. The data profile is the profile used to send and receive data over the cellular network.  Note The slot keyword and its options are available only on Cisco 800 Series 4G LTE ISRs which supports the Dual SIM feature.

Configuring a Dual SIM

The Dual SIM feature provides a failover mechanism in case the active SIM loses connectivity to the network.



Note

Dual SIM is supported only on Cisco 819 Series 4G LTE ISRs, Cisco C880 Series 4G LTE ISRs and Cisco C890 Series 4G LTE ISRs. Dual SIM is not supported on EHWICs although modular ISRs can have multiple 4G EHWICs.

Usage Guidelines for Configuring a Dual SIM

Follow these guidelines while you configure a dual SIM:

- By default, SIM slot 0 is the primary slot, and slot 1 is the backup.
- To change the primary SIM slot, use the `lte sim primary` command in the cellular controller configuration mode.
- Assign profiles for each SIM using the `lte sim data-profile` command. Each SIM has an associated data profile and an attach profile.

- In the **lte sim data-profile** command, the *profile-number* refers to the data profile associated with a SIM. The *attach-profile-number* is the attach profile associated with a SIM.
- If the attach profile details are not provided by or are not relevant to the carrier, you can assign the same number as the data profile. Otherwise, create a profile with the carrier-specific attach profile parameters and assign that profile number using the **lte sim data-profile** command.

SUMMARY STEPS

1. **configure terminal**
2. **controller cellular *unit***
3. **lte sim primary *slot***
4. **lte sim max-retry *number***
5. **lte sim authenticate [0 | 7] *pin slot* {0 | 1}**
6. **lte failover *timeout-period***
7. **lte sim data-profile *number attach-profile number slot* {0 | 1}**

DETAILED STEPS

	Command or Action	Purpose
Step 1	configure terminal Example: Device# configure terminal	Enters the global configuration mode.
Step 2	controller cellular <i>unit</i> Example: Device(config)# controller cellular 0/0	Enters the cellular controller configuration mode.
Step 3	lte sim primary <i>slot</i> Example: Device(config-controller)# lte sim primary 1	(Optional) Enters either slot number 0 or 1 of the primary SIM.
Step 4	lte sim max-retry <i>number</i> Example: Device(config-controller)# lte sim max-retry 20	(Optional) Specifies the maximum number of failover retries from 1 to 65535. The default value is 10.

	Command or Action	Purpose
Step 5	<p>lte failovertimer <i>timeout-period</i></p> <p>Example: Device(config-controller)# lte failovertimer 6</p>	<p>(Optional) By default, the failover time period is 2 minutes before the primary SIM switches over to the secondary SIM if service becomes unavailable.</p> <p>Specify a failover timeout value between 1 and 7 minutes before a switchover occurs.</p>
Step 6	<p>lte sim data-profile <i>number</i> attach-profile <i>number</i> slot {0 1}</p> <p>Example: Device(config-controller)# lte sim data-profile 2 attach-profile 1 slot 0 Device(config-controller)# lte sim data-profile 2 attach-profile 1 slot 1</p>	<p>Applies the configured profile number to the SIM and its slot number. The default (primary) slot is 0.</p> <p>You must also identify the primary and secondary SIM for the configured profile when two SIMs are presented.</p>

**Note**

You can manually activate a SIM using the **cellular 0 lte sim activate slot <0 or 1>** command.

Configuration Examples

The following example shows how to configure a dual SIM:

```
router# configure terminal
router(config)# controller Cellular 0
router(config-controller)# lte sim data-profile 1 attach-profile 1 slot 0
router(config-controller)# lte sim data-profile 2 attach-profile 2 slot 1
router(config-controller)# lte sim primary slot 1
router(config-controller)# lte sim max-retry 20
router(config-controller)# lte sim failovertimer 5
```

The following example shows how to display an active profile on a SIM:

```
router# show cellular 0 profile
Profile Information
=====
Profile 1 = INACTIVE
-----
PDP Type = IPv4
Access Point Name (APN) = internet.telenor.se
Profile 2 = ACTIVE* **
-----
PDP Type = IPv4
PDP address = 78.78.16.214
Access Point Name (APN) = telia.online.se
    Primary DNS address = 195.67.199.18
    Secondary DNS address = 195.67.199.19
* - Default profile
** - LTE attach profile
Configured default profile for active SIM 1 is profile 2.
```

The following example shows how to display the status of a dual SIM:

```
router# show cellular 0 security
Active SIM = 0
SIM switchover attempts = 0
Card Holder Verification (CHV1) = Disabled
```

```

SIM Status = OK
SIM User Operation Required = None
Number of CHV1 Retries remaining = 3
router#

```

The following example shows how to display the status of a dual SIM:

```

router# show controller cellular 0
Interface Cellular0
4G WWAN Modem - Global Multimode LTE/DC-HSPA+/HSPA+/HSPA/UMTS/EDGE/GPRS

Cellular modem configuration
=====
Modem is recognized as valid
manufacture id: 0x00001199      product id: 0x000068A2
Power status: Active
Sierra Wireless Direct IP MC7710 modem
:
:
Cellular Dual SIM details:
-----
SIM 0 is present
SIM 1 is present
SIM 0 is active SIM

```


Data Call Setup

To set up a data call, use the following procedures:

- [Configuring the Cellular Interface, page 40](#)
- [Configuring DDR, page 43](#)
- [Configuring DDR Backup, page 46](#)

Figure 3 shows a typical data call setup.

Figure 3 Data Call Setup with EHWIC-4G-LTE

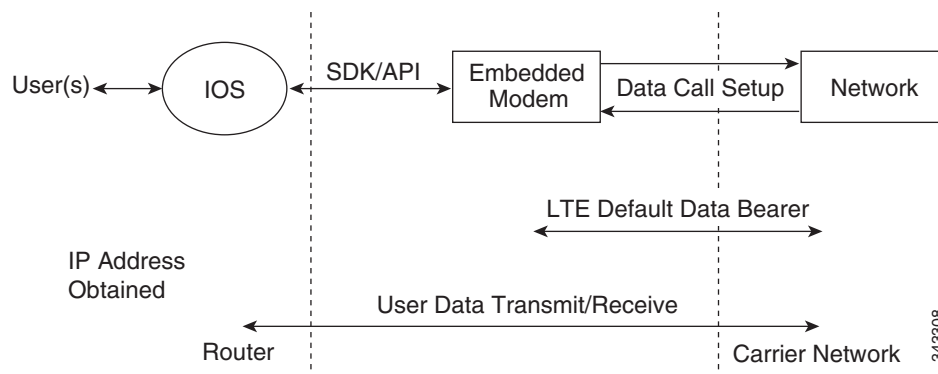

Configuring the Cellular Interface

To configure the cellular interface, enter the following commands starting in EXEC mode.

**Note**

For the EHWIC, the *unit* argument identifies the router slot, WIC slot, and port separated by slashes (0/0/0). For the Cisco 800 Series 4G LTE ISRs, the *unit* argument identifies slot “0” for all commands.

**Note**

Starting from Cisco IOS Release 15.3(3)M and 15.3(1)T, the chat-script configuration, including dialer in-band, dialer string, and script dialer, is auto-generated based on the modem type plugged in. The 3G and 4G EHWIC SKUs and the fixed 3G and 4G routers support these configuration changes.

SUMMARY STEPS

1. **configure terminal**
2. **interface cellular** *unit*
3. **ip address negotiated**
4. **encapsulation slip**
5. **dialer in-band**
6. **dialer string** *string*
7. **dialer-group** *group-number*
8. **exit**
9. **chat-script** *script-name* "" "AT!CALL" TIMEOUT *timeout-value* "OK"
10. **ip route** *network-number network-mask* {*ip-address* | *interface*} [*administrative distance*] [*name name*]
11. **dialer-list** *dialer-group protocol protocol-name* {**permit** | **deny** | **list** *access-list-number* | *access-group*}
12. **line** *unit*
13. **script dialer** *regular-expression*

DETAILED STEPS

	Command or Action	Purpose
Step 1	configure terminal Example: Device# configure terminal	Enters global configuration mode.
Step 2	interface cellular <i>unit</i> Example: Device(config)# interface cellular 0/0/0	Specifies the cellular interface.
Step 3	ip address negotiated Example: Device(config-if)# ip address negotiated	Specifies that the IP address for a particular interface is dynamically obtained.

	Command or Action	Purpose
Step 4	<p>encapsulation <i>slip</i></p> <p>Example: Device(config-if)# encapsulation slip</p>	Specifies Serial Line Internet Protocol (SLIP) encapsulation for an interface configured for dedicated asynchronous mode or dial-on-demand routing (DDR). This is the default for asynchronous interfaces.
Step 5	<p>dialer in-band</p> <p>Example: Device(config-if)# dialer in-band</p>	Enables DDR and configures the specified serial interface to use in-band dialing.
Step 6	<p>dialer string <i>string</i></p> <p>Example: Device(config-if)# dialer string lte</p>	Specifies the number or string to dial.
Step 7	<p>dialer-group <i>group-number</i></p> <p>Example: Device(config-if)# dialer-group 1</p>	Specifies the number of the dialer access group to which the specific interface belongs.
Step 8	<p>exit</p> <p>Example: Device(config-if)# exit</p>	Enters the global configuration mode.
Step 9	<p>chat-script <i>script-name</i> "" "AT!CALL" TIMEOUT <i>timeout-value</i> "OK"</p> <p>Example: Device(config)# chat-script lte"" "AT!CALL" TIMEOUT 60 "OK"</p>	Defines the ATDT commands when the dialer is initiated.
Step 10	<p>ip route <i>network-number network-mask</i> {<i>ip-address</i> <i>interface</i>} [<i>administrative distance</i>] [<i>name name</i>]</p> <p>Example: Device(config)# ip route 209.165.200.225 255.255.255.224 cellular 0/0/0</p>	<p>Establishes a floating static route with the configured administrative distance through the specified interface.</p> <p>Note A higher administrative distance should be configured for the route through the backup interface so that it is used only when the primary interface is down.</p>
Step 11	<p>dialer-list <i>dialer-group protocol protocol-name</i> {permit deny list <i>access-list-number</i> access-group}</p> <p>Example: Device(config)# dialer-list 1 protocol ip list 1</p>	Creates a dialer list for traffic of interest and permits access to an entire protocol.

	Command or Action	Purpose
Step 12	line <i>unit</i> Example: Device(config)# line 0/0/0	Specifies the line configuration mode.
Step 13	script dialer <i>regular-expression</i> Example: Device(config-line)# script dialer lte	Specifies a default modem chat script.

**Note**

If a tunnel interface is configured with **ip unnumbered cellular 0/0/0**, it is necessary to configure the actual static IP address under the cellular interface, in place of **ip address negotiated**. For a sample cellular interface configuration, see the [“Example: Basic Cellular Interface Configuration: Cisco EHWIC-4G-LTE”](#) section on page 54.

Configuring DDR

To configure DDR for the cellular interface, enter the following commands starting in EXEC mode.

**Note**

For the EHWIC, the *unit* argument identifies the router slot, WIC slot, and port separated by slashes (0/0/0). For the Cisco 800 Series 4G LTE ISRs, the *unit* argument identifies slot “0” for all commands.

SUMMARY STEPS

1. **configure terminal**
2. **interface cellular** *unit*
3. **ip address negotiated**
4. **encapsulation slip**
5. **dialer in-band**
6. **dialer pool-member** *number*
7. **interface dialer** *number*
8. **ip address negotiated**
9. **encapsulation slip**
10. **dialer pool** *number*
11. **dialer idle-timeout** *seconds*
12. **dialer string** *string*
13. **dialer-group** *group-number*
14. **exit**
15. **dialer-list** *dialer-group* **protocol** *protocol-name* {**permit** | **deny** | **list** *access-list-number* | **access-group**}
16. **access-list** *access-list-number* **permit** *ip-source-address*

17. `line unit`
18. `script dialer regular-expression`
19. `exit`
20. `chat-script script-name "" "AT!CALL" TIMEOUT timeout-value "OK"`

DETAILED STEPS

	Command or Action	Purpose
Step 1	<code>configure terminal</code> Example: Device# <code>configure terminal</code>	Enters global configuration mode.
Step 2	<code>interface cellular unit</code> Example: Device(config)# <code>interface cellular 0/0/0</code>	Specifies the cellular interface.
Step 3	<code>ip address negotiated</code> Example: Device(config-if)# <code>ip address negotiated</code>	Specifies that the IP address for a particular interface is dynamically obtained.
Step 4	<code>encapsulation slip</code> Example: Device(config-if)# <code>encapsulation slip</code>	Specifies Serial Line Internet Protocol (SLIP) encapsulation for an interface configured for dedicated asynchronous mode or dial-on-demand routing (DDR). This is the default for asynchronous interfaces.
Step 5	<code>dialer in-band</code> Example: Device(config-if)# <code>dialer in-band</code>	Enables DDR and configures the specified serial interface to use in-band dialing.
Step 6	<code>dialer pool-member number</code> Example: Device(config-if)# <code>dialer pool-member 1</code>	Specifies the number of a dialer profile's dialing pool to which the specific interface belongs.
Step 7	<code>interface dialer number</code> Example: Device(config-if)# <code>interface dialer 1</code>	Specifies the number of a dialer rotary group to which the specific interface belongs.
Step 8	<code>ip address negotiated</code> Example: Device(config-if)# <code>ip address negotiated</code>	Specifies that the IP address for a particular interface is dynamically obtained.

	Command or Action	Purpose
Step 9	<p>encapsulation <i>slip</i></p> <p>Example: Device(config-if)# encapsulation slip</p>	Specifies Serial Line Internet Protocol (SLIP) encapsulation for an interface configured for dedicated asynchronous mode or dial-on-demand routing (DDR). This is the default for asynchronous interfaces.
Step 10	<p>dialer pool <i>number</i></p> <p>Example: Device(config-if)# dialer pool 1</p>	Specifies the number of a dialing pool that the dialer interface can use to connect to a specific destination subnetwork.
Step 11	<p>dialer idle-timeout <i>seconds</i></p> <p>Example: Device(config-if)# dialer idle-timeout 30</p>	Specifies the duration of idle time, in seconds, after which a line will be disconnected.
Step 12	<p>dialer string <i>string</i></p> <p>Example: Device(config-if)# dialer string lte</p>	Specifies the number or string to dial.
Step 13	<p>dialer-group <i>group-number</i></p> <p>Example: Device(config-if)# dialer-group 1</p>	Specifies the number of the dialer access group to which the specific interface belongs.
Step 14	<p>exit</p> <p>Example: Device(config-if)# exit</p>	Enters the global configuration mode.
Step 15	<p>dialer-list <i>dialer-group</i> protocol <i>protocol-name</i> {permit deny list <i>access-list-number</i> access-group}</p> <p>Example: Device(config)# dialer-list 1 protocol ip list 1</p>	Creates a dialer list for traffic of interest and permits access to an entire protocol.
Step 16	<p>access-list <i>access-list-number</i> permit <i>ip-source-address</i></p> <p>Example: Device(config)# access-list 1 permit any</p>	Defines traffic of interest.
Step 17	<p>line <i>unit</i></p> <p>Example: Device(config)# line 0/0/0</p>	Specifies the line configuration mode.
Step 18	<p>script dialer <i>regular-expression</i></p> <p>Example: Device(config-line)# script dialer lte</p>	Specifies a default modem chat script.

	Command or Action	Purpose
Step 19	<pre>exit</pre> <p>Example: Device(config-line)# exit</p>	Exits line configuration mode.
Step 20	<pre>chat-script script-name "" "AT!CALL" TIMEOUT timeout-value "OK"</pre> <p>Example: Device(config)# chat-script lte"" "AT!CALL" TIMEOUT 60 "OK"</p>	Defines the ATDT commands when the dialer is initiated.

Configuring DDR Backup

To monitor the primary connection and initiate the backup connection when needed, the router can use one of the following methods:

- **Backup Interface**—The backup interface that stays in standby mode until the primary interface line protocol is detected as down and then is brought up.
- **Floating Static Route**—The route through the backup interface has an administrative distance that is greater than the administrative distance of the primary connection route and therefore would not be in the routing table until the primary interface goes down.
- **Dialer Watch**—Dialer watch is a backup feature that integrates dial backup with routing capabilities.

Configuring Interfaces to Use a Backup Interface



Note

You cannot configure a backup interface for the cellular interface and any other asynchronous serial interface.

To configure one or more interfaces to use a backup interface, use the following commands, beginning in global configuration mode.

SUMMARY STEPS

1. **interface** *type number*
2. **backup interface cellular** *number*
3. **backup delay** *enable-delay-period disable-delay-period*

DETAILED STEPS

	Command or Action	Purpose
Step 1	interface <i>type number</i> Example: Device(config)# interface atm 0/0/0	Specifies the interface to be backed up and begins interface configuration mode.
Step 2	backup interface cellular <i>number</i> Example: Device(config-if)# backup interface cellular 0/0/0	Specifies the cellular interface as backup.
Step 3	backup delay <i>enable-delay-period</i> <i>disable-delay-period</i> Example: Device(config-if)# backup delay 0 10	Specifies delay between the physical interface going down and the backup interface being enabled and between the physical interface coming back up and the backup being disabled.

Enabling 4G GPS and NMEA Data Streaming

GPS NMEA data streaming to external NMEA 2.0-compliant GPS plotter applications can be enabled on Cisco 4G LTE EHWICs, Cisco 819 Series 4G LTE ISRs, Cisco C880 Series 4G LTE ISRs, and Cisco C890 Series 4G LTE ISRs.

**Note**

For an EHWIC, the *unit* argument identifies the router slot, WIC slot, and the port, and is separated by slashes (0/0/0). For the Cisco 800 Series 4G LTE ISRs, the *unit* argument identifies slot 0 for all commands.

SUMMARY STEPS

1. **configure terminal**
2. **controller cellular** *unit*
3. (Optional) **lte gps enable**
4. **lte gps mode standalone**
5. **lte gps nmea** {**ip** | **serial** [*streaming*]}
or
lte gps nmea
6. **end**
7. **show cellular** *unit* **gps**
8. **show cellular** *unit* **gps detail**
9. **show running**
10. **show line**
11. **telnet** *ip address port*

DETAILED STEPS

	Command	Description
Step 1	<code>configure terminal</code> Example: Device# <code>configure terminal</code>	Enters the configuration mode.
Step 2	<code>controller cellular unit</code> Example: Device(config)# <code>controller cellular 0</code>	Enters the controller cellular configuration mode.
Step 3	<code>lte gps enable</code> Example: Device(config-controller)# <code>lte gps enable</code>	(Optional) GPS is enabled by default. Use this command to enable the GPS feature if GPS has been disabled for any reason.
Step 4	<code>lte gps mode standalone</code> Example: Device(config-controller)# <code>lte gps mode standalone</code>	Enables the standalone GPS mode.
Step 5	<code>lte gps nmea {ip serial [streaming]}</code> or <code>lte gps nmea</code> Example: Device(config-controller)# <code>lte gps nmea ip</code>	Enables NMEA streaming. Cisco 4G LTE EHWICs support only IP NMEA streaming. Therefore, the IP interface and serial interface options are unavailable. The Cisco 819 4G LTE ISRs, Cisco C880 Series 4G LTE ISRs, and Cisco C890 Series 4G LTE ISRs support the following NMEA streaming options: <ul style="list-style-type: none"> • ip—NMEA over IP interface. • serial—NMEA over serial interface. • streaming—Parameters are: 38400 (bps baud rate), 4800 (bps baud rate, which is the default) line-config (use tty line configuration). Note Effective with Cisco IOS release 15.4(3)T, the <code>lte gps nmea serial ip</code> command is available on Cisco 800 series routers with serial interfaces only.
Step 6	<code>end</code> Example: Device(config-controller)# <code>end</code>	Exits the controller configuration mode and returns to the privileged EXEC mode.

	Command	Description
Step 7	<p>show cellular unit gps</p> <p>Example:</p> <pre>Device# show cellular 0/0/0 gps GPS Info ----- GPS Feature: enabled GPS Port Selected: DIV port GPS State: GPS enabled GPS Mode Configured: standalone Last Location Fix Error: Offline [0x0] GPS Error Count: 13 Latitude: 37 Deg 24 Min 58 Sec North Longitude: 121 Deg 55 Min 7 Sec West Timestamp (GMT): Thu Aug 15 14:23:35 2013 Fix type index: 0, Height: 15 m</pre>	<p>Displays a summary of the following GPS data:</p> <ul style="list-style-type: none"> • GPS state information (GPS disabled, GPS acquiring, GPS enabled) • GPS mode configured (standalone) • GPS location and timestamp information • GPS satellite information • GPS feature (enabled or disabled) • GPS port selected (Dedicated GPS and GPS port with voltage-no-bias)
Step 8	<p>show cellular unit gps detail</p> <p>Example:</p> <pre>Device# show cellular 0 gps detail GPS Info ----- GPS Feature: enabled GPS Port Selected: DIV port GPS State: GPS enabled GPS Mode Configured: standalone Last Location Fix Error: Offline [0x0] GPS Error Count: 71 Latitude: 37 Deg 24 Min 58 Sec North Longitude: 121 Deg 55 Min 7 Sec West Timestamp (GMT): Fri Aug 16 10:46:25 2013 Fix type index: 0, Height: 20 m HDOP: 0.8, GPS Mode Used: standalone Satellite Info ----- Satellite #1, elevation 18, azimuth 52, SNR 30 * Satellite #4, elevation 13, azimuth 165, SNR 29 * Satellite #7, elevation 3, azimuth 133, SNR 22 Satellite #8, elevation 33, azimuth 126, SNR 29 * Satellite #9, elevation 33, azimuth 133, SNR 0 * Satellite #11, elevation 4, azimuth 39, SNR 0 Satellite #15, elevation 29, azimuth 284, SNR 0 * Satellite #17, elevation 84, azimuth 118, SNR 0 * Satellite #26, elevation 38, azimuth 224, SNR 0</pre>	<p>Displays detailed GPS data.</p>
Step 9	<p>show running config</p> <p>Example:</p> <pre>Device# show running config ! controller Cellular 0 lte gps mode standalone lte gps nmea ip !</pre>	<p>Shows the output of the configuration.</p>

	Command	Description
Step 10	<p>show line</p> <p>Example:</p> <pre>Device# show line Tty Typ Tx/Rx A Modem Roty AccO AccI Uses Noise Overruns Int * 0 CTY - - - - - 0 0 0/0 - 0 1 AUX 0/0 - - - - - 0 0 0/0 - 0 2 TTY 9600/9600 - - - - - 0 0 0/0 - I 3 TTY - inout - - - 0 0 0/0 Ce0 I 6 TTY - inout - - - 0 24101 0/0 NM0/0/5 0 10 VTY - - - - - 0 0 0/0 - 0 11 VTY - - - - - 0 0 0/0 - 0 12 VTY - - - - - 0 0 0/0 - 0 13 VTY - - - - - 0 0 0/0 - 0 14 VTY - - - - - 0 0 0/0 - Line(s) not in async mode -or- with no hardware support: 4-5, 7-9</pre>	<p>Shows the async port number.</p> <p>After NMEA is configured, Cisco IOS creates a n NMEA async port. The port number is platform dependent. In this example, the async port number is line 6.</p>
Step 11	<p>telnet ip address port</p> <p>Example:</p> <pre>Device# telnet 10.1.1.1 2006 Trying 10.1.1.1, 2006 ... Open \$GPRMC,,V,,,,,,,,,N*53 \$GPGSV,3,1,11,01,17,049,34,04,16,164,30,08,29,129,32 ,09,29,136,38*70 \$GPGSV,3,2,11,15,29,281,37,17,83,073,36,28,,41,07,0 0,135,*4B \$GPGSV,3,3,11,11,01,037,,12,00,272,,24,18,313,*46 \$GLGSV,2,1,08,78,23,323,27,86,25,030,27,77,67,014,25 ,76,37,112,32*6D \$GLGSV,2,2,08,88,39,203,32,87,81,070,31,68,01,292,34 ,69,,,*5A \$GPGGA,185555.0,3724.984762,N,12155.122163,W,1,04,13 .3,23.2,M,-27.0,M,,*6A \$PQXFI,185555.0,3724.984762,N,12155.122163,W,23.2,26 4.53,176.14,9.08*46 \$GNGNS,185555.0,3724.984762,N,12155.122163,W,AN,04,1 3.3,23.2,-27.0,,*51 \$GPVTG,,T,,M,,N,,K,N*2C \$GPRMC,185555.0,A,3724.984762,N,12155.122163,W,,,160 813,,,A*7B \$GPGSA,A,3,08,09,15,17,,,,,,,,,16.2,13.3,9.2*3E \$GNGSA,A,3,08,09,15,17,,,,,,,,,16.2,13.3,9.2*20 \$GNGSA,A,3,,,,,,,,,,,,,16.2,13.3,9.2*23</pre>	<p>After NMEA streaming is enabled, the modem starts to stream NMEA data over the NMEA port regardless of whether the GPS fix is acquired or not. You can reverse Telnet to the NMEA port to check the NMEA data.</p>

Configuring 4G SMS Messaging

**Note**

In the context of an EHWIC, the *unit* argument identifies the router slot, WIC slot, and the port, and is separated by slashes (0/0/0). For the Cisco 800 Series 4G LTE ISRs, the *unit* argument identifies slot 0 for all commands.

SUMMARY STEPS

1. **configure terminal**
2. **controller cellular *unit***
3. **lte sms archive path *FTP-URL***
4. **cellular *unit* lte sms view {**all** | *ID* | **summary**}**
5. **end**
6. **show cellular *unit* sms**
7. **cellular *unit* lte sms send *number***
8. **cellular *unit* lte sms delete [**all** | *id*]**

DETAILED STEPS

	Command	Description
Step 1	<pre>configure terminal</pre> <p>Example: Device# configure terminal</p>	Enters the configuration mode.
Step 2	<pre>controller cellular unit</pre> <p>Example: Device(config)# controller cellular 0/1/0</p>	Enters the controller cellular configuration mode.
Step 3	<pre>lte sms archive path FTP-URL</pre> <p>Example: Device(config-controller)# lte sms archive path ftp://username:password@172.25.211.175/SMS-LTE</p>	<p>Specifies an FTP server folder path to send all the incoming and outgoing SMS messages. After the folder path is identified, it is appended automatically with outbox and inbox folders for the path to which SMS messages are sent and received, for example:</p> <pre>ftp://172.25.211.175/SMS-LTE/outbox ftp://172.25.211.175/SMS-LTE/inbox</pre>
Step 4	<pre>cellular unit lte sms view {all ID summary}</pre> <p>Example: Device# cellular 0/0/0 lte sms view summary</p> <pre>ID FROM YY/MM/DD HR:MN:SC SIZE CONTENT 0 4442235525 12/05/29 10:50:13 137 Your entry last month has... 2 5553337777 13/08/01 10:24:56 5 First 3 5553337777 13/08/01 10:25:02 6 Second</pre>	<p>Displays the message contents of incoming texts received by a modem.</p> <ul style="list-style-type: none"> all—Displays the message contents of up to 255 incoming text messages received by the modem. ID—Displays the message contents for a specified ID (0-255) of an incoming text message. summary—Displays a summary of the incoming text messages received by the modem.
Step 5	<pre>end</pre> <p>Example: Device(config)# end</p>	Exits the configuration mode and returns to the privileged EXEC mode.

	Command	Description
Step 6	<p>show cellular unit sms</p> <p>Example:</p> <pre>Device# show cellular 0/0/0 sms Incoming Message Information ----- SMS stored in modem = 20 SMS archived since booting up = 0 Total SMS deleted since booting up = 0 Storage records allocated = 25 Storage records used = 20 Number of callbacks triggered by SMS = 0 Number of successful archive since booting up = 0 Number of failed archive since booting up = 0 Outgoing Message Information ----- Total SMS sent successfully = 0 Total SMS send failure = 0 Number of outgoing SMS pending = 0 Number of successful archive since booting up = 0 Number of failed archive since booting up = 0 Last Outgoing SMS Status = SUCCESS Copy-to-SIM Status = 0x0 Send-to-Network Status = 0x0 Report-Outgoing-Message-Number: Reference Number = 0 Result Code = 0x0 Diag Code = 0x0 0x0 0x0 0x0 0x0 SMS Archive URL = ftp://lab:lab@1.3.150.1/outbox</pre>	<p>Displays all the information in the text messages sent and received. Message information includes text messages sent successfully, received, archived, and messages pending to be sent. LTE-specific information on errors in case of a FAILED attempt may also be displayed.</p>
Step 1	<p>cellular unit lte sms send number</p> <p>Example:</p> <pre>Device# cellular 0/1/0 lte sms send 15554443333</pre>	<p>Enables a user to send a 4G LTE band SMS message to other valid recipients, provided they have a text message plan. The <i>number</i> argument is the telephone number of the SMS message recipient.</p> <p>Note 10-digit or 11-digit (phone) numbers are the proper numerical format for sending a text. For example, ##### or 1#####. Seven digits are not supported.</p>
Step 2	<p>cellular unit lte sms delete [all id]</p> <p>Example:</p> <pre>Device# cellular 0/1/0 lte sms delete all</pre>	<p>(Optional) Deletes one message ID or all of the stored messages from memory.</p>

Configuration Examples for 4G LTE

- [Example: Basic Cellular Interface Configuration: Cisco EHWIC-4G-LTE, page 54](#)
- [Example: Basic Cellular Interface Configuration: Cisco 819 4G LTE ISR, page 54](#)
- [Cellular Interface Configuration for Always-On Connection, page 55](#)
- [Example: GRE Tunnel over Cellular Interface Configuration, page 56](#)
- [4G-LTE Wireless WAN as Backup with NAT and IPSec, page 57](#)
- [SIM Configuration: Examples, page 59](#)
- [SMS Initiated Call Back Configuration: Example, page 62](#)
- [Dialer-Watch Configuration without External Dialer Interface: Example, page 63](#)
- [Dialer-Persistent Configuration with External Dialer Interface: Example, page 64](#)

Example: Basic Cellular Interface Configuration: Cisco EHWIC-4G-LTE

The following example shows how to configure the cellular interface to be used as a primary and is configured as the default route:

```
Device# show running-config
chat-script lte "" "AT!CALL" TIMEOUT 20 "OK"

interface Cellular0/0/0
ip address negotiated
encapsulation slip
dialer in-band
dialer string lte
dialer-group 1
async mode interactive

ip route 172.22.1.10 255.255.255.255 cellular 0/0/0

dialer-list 1 protocol ip permit

line 0/0/0
script dialer lte
modem InOut
```

Example: Basic Cellular Interface Configuration: Cisco 819 4G LTE ISR

The following example shows how to configure the cellular interface to be used as primary and is configured as the default route:

```
chat-script lte "" "AT!CALL1" TIMEOUT 20 "OK"
!
!
controller Cellular 0
!
!
interface Cellular0
ip address negotiated
encapsulation slip
load-interval 30
dialer in-band
dialer idle-timeout 0
```

```

dialer string lte
dialer-group 1
no peer default ip address
async mode interactive
routing dynamic
!
ip route 172.22.1.10 255.255.255.255 cellular 0/0/0
!
dialer-list 1 protocol ip permit
!
line 3
 script dialer lte
 modem InOut
 no exec
 transport input all
 transport output all
!
```

Cellular Interface Configuration for Always-On Connection

This section provides the following configuration examples:

- [Dialer-Watch Configuration without External Dialer Interface, page 55](#)
- [Dialer-Persistent Configuration with External Dialer Interface, page 55](#)

Dialer-Watch Configuration without External Dialer Interface

The following example shows how to configure dialer-watch without external dialer interface. The bold text is used to indicate important commands that are specific to dialer-watch.

```

chat-script lte "" "AT!CALL" TIMEOUT 20 "OK"

interface Cellular0/0/0
 ip address negotiated
 encapsulation slip
 dialer in-band
 dialer string LTE
 dialer watch-group 1
 async mode interactive
!
dialer watch-list 1 ip 5.6.7.8 0.0.0.0
dialer watch-list 1 delay route-check initial 60
dialer watch-list 1 delay connect 1
!
ip route 0.0.0.0 0.0.0.0 cellular 0/0/0
line 0/0/0
 script dialer LTE
 modem InOut
 no exec
 transport input all
 transport output all
```

Dialer-Persistent Configuration with External Dialer Interface

The following example shows how to configure dialer-persistent with external dialer interface. The bold text is used to indicate important commands that are specific to dialer-persistent.

```

chat-script lte "" "AT!CALL" TIMEOUT 20 "OK"
```

```

interface Cellular0/0/0
 ip address negotiated
 encapsulation slip
 dialer in-band
 dialer pool-member 1
 async mode interactive
 routing dynamic

interface Dialer1
 ip address negotiated
 encapsulation slip
 dialer pool 1
 dialer idle-timeout 0
 dialer string lte
 dialer persistent
 dialer-group 1
!

dialer-list 1 protocol ip permit
ip route 0.0.0.0 0.0.0.0 dialer 1

line 0/0/0
 script dialer lte
 modem InOut
 no exec
 transport input all
 transport output all

```

Example: GRE Tunnel over Cellular Interface Configuration

The following example shows how to configure the static IP address when a GRE tunnel interface is configured with **ip address unnumbered** *cellular interface*:



Note

The GRE tunnel configuration is supported only if the service providers provide a public IP address on the LTE interface.



Note

For service providers using a private IP address, the point-to-point static GRE tunnel cannot be set up with a private IP address at one end and a public IP address on the other end.

```

interface Tunnel2
 ip unnumbered <internal LAN interface GE0/0 etc.>
 tunnel source Cellular0
 tunnel destination a.b.c.d
 interface Cellular0
 ip address negotiated
 encapsulation slip
 no ip mroute-cache
 dialer in-band
 dialer string lte
 dialer-group 1
 async mode interactive

```

4G-LTE Wireless WAN as Backup with NAT and IPSec

The following example shows how to configure the 4G-LTE wireless WAN on the router as backup with NAT and IPSec:


Note

The receive and transmit speeds cannot be configured. The actual throughput depends on the cellular network service.

```

ip dhcp excluded-address 10.4.0.254
!
ip dhcp pool lan-pool
  network 10.4.0.0 255.255.0.0
  dns-server 10.4.0.254
  default-router 10.4.0.254
!
!
chat-script lte "" "AT!CALL" TIMEOUT 20 "OK"

crypto isakmp policy 1
  encr 3des
  authentication pre-share
crypto isakmp key address a.b.c.d
!
!
crypto ipsec transform-set ah-sha-hmac esp-3des
!
crypto map gsml 10 ipsec-isakmp
  set peer a.b.c.d
  set transform-set
  match address 103
!
!
interface ATM0/0/0
  no ip address
  ip virtual-reassembly
  load-interval 30
  no atm ilmi-keepalive
  dsl operating-mode auto
!
interface ATM0/0/0.1 point-to-point
  backup interface Cellular0/3/0
  ip nat outside
  ip virtual-reassembly
  no snmp trap link-status
  pvc 0/35
  pppoe-client dial-pool-number 2
!
!
interface Cellular0/3/0
  ip address negotiated
  ip nat outside
  ip virtual-reassembly
  encapsulation slip
  no ip mroute-cache
  dialer in-band
  dialer idle-timeout 0
  dialer string lte
  dialer-group 1
  async mode interactive
  crypto map gsml

```

```
!  
  
interface Vlan104  
  description used as default gateway address for DHCP clients  
  ip address 10.4.0.254 255.255.0.0  
  ip nat inside  
  ip virtual-reassembly  
!  
interface Dialer2  
  ip address negotiated  
  ip mtu 1492  
  ip nat outside  
  ip virtual-reassembly  
  encapsulation ppp  
  load-interval 30  
  dialer pool 2  
  dialer-group 2  
  ppp authentication chap callin  
  ppp chap hostname cisco@dsl.com  
  ppp chap password 0 cisco  
  ppp ipcp dns request  
  crypto map gsm1  
!  
ip local policy route-map track-primary-if  
ip route 0.0.0.0 0.0.0.0 Dialer2 track 234  
ip route 0.0.0.0 0.0.0.0 Cellular0/3/0 254  
!  
!  
ip nat inside source route-map nat2cell interface Cellular0/3/0 overload  
ip nat inside source route-map nat2dsl interface Dialer2 overload  
!  
ip sla 1  
  icmp-echo 2.2.2.2 source-interface Dialer2  
  timeout 1000  
  frequency 2  
ip sla schedule 1 life forever start-time now  
access-list 1 permit any  
access-list 101 deny ip 10.4.0.0 0.0.255.255 10.0.0.0 0.255.255.255  
access-list 101 permit ip 10.4.0.0 0.0.255.255 any  
access-list 102 permit icmp any host 2.2.2.2  
access-list 103 permit ip 10.4.0.0 0.0.255.255 10.0.0.0 0.255.255.255  
dialer-list 1 protocol ip list 1  
dialer-list 2 protocol ip permit  
!  
!  
route-map track-primary-if permit 10  
  match ip address 102  
  set interface Dialer2  
!  
route-map nat2dsl permit 10  
  match ip address 101  
  match interface Dialer2  
!  
route-map nat2cell permit 10  
  match ip address 101  
  match interface Cellular0/3/0  
!  
line 0/3/0  
  exec-timeout 0 0  
  script dialer lte  
  login  
  modem InOut
```

**Note**

For service providers using a private IP address, use the **crypto ipsec transform-set esp** command (that is, **esp-aes esp-sha256-hmac...**).

SIM Configuration: Examples

- [Locking the SIM Card: Example, page 59](#)
- [Unlocking the SIM Card: Example, page 59](#)
- [Automatic SIM Authentication: Example, page 60](#)
- [Changing the PIN Code: Example, page 61](#)
- [Configuring an Encrypted PIN: Example, page 62](#)

Locking the SIM Card: Example

The following example shows how to lock the SIM. The italicized text in this configuration example is used to indicate comments and are not be seen when a normal console output is viewed.

```
Device# sh cellular 0/0/0 security
Card Holder Verification (CHV1) = Disabled
SIM Status = OK
SIM User Operation Required = None
Number of CHV1 Retries remaining = 3
Device#
!
!  SIM is in unlocked state.
!
Device# cellular 0/0/0 lte sim lock 1111
!!!WARNING: SIM will be locked with pin=1111(4).
Do not enter new PIN to lock SIM. Enter PIN that the SIM is configured with.
Call will be disconnected!!!
Are you sure you want to proceed?[confirm]
Device#
Apr 26 19:35:28.339: %CELLWAN-2-MODEM_DOWN: Modem in HWIC slot 0/0 is DOWN
Apr 26 19:35:59.967: %CELLWAN-2-MODEM_UP: Modem in HWIC slot 0/0 is now UP
Device#
Device# sh cellular 0/0/0 security
Card Holder Verification (CHV1) = Enabled
SIM Status = Locked
SIM User Operation Required = Enter CHV1
Number of CHV1 Retries remaining = 3
Device#
!
!  SIM is in locked state.
!
```

Unlocking the SIM Card: Example

The following example shows how to unlock the SIM. The italicized text throughout this configuration example is used to indicate comments and will not be seen when a normal console output is viewed.

```
Device# sh cellular 0/0/0 security
Card Holder Verification (CHV1) = Enabled
SIM Status = Locked
SIM User Operation Required = Enter CHV1
Number of CHV1 Retries remaining = 3
```

```

Device#
!
!   SIM is in locked state.
!

Device# cellular 0/0/0 lte sim unlock 1111
!!!WARNING: SIM will be unlocked with pin=1111(4).
Do not enter new PIN to unlock SIM. Enter PIN that the SIM is configured with.
Call will be disconnected!!!
Are you sure you want to proceed?[confirm]
Device#
Device# sh cellular 0/0/0 security
Card Holder Verification (CHV1) = Disabled
SIM Status = OK
SIM User Operation Required = None
Number of CHV1 Retries remaining = 3
Device#
!
!   SIM is in unlocked state.
!

```

Automatic SIM Authentication: Example

The following example shows how to configure automatic SIM authentication. The italicized text throughout this configuration example is used to indicate comments and will not be seen when a normal console output is viewed.

```

Device# show cellular 0/0/0 security
Card Holder Verification (CHV1) = Disabled
SIM Status = OK
SIM User Operation Required = None
Number of CHV1 Retries remaining = 3
Device#
!
!   SIM is in unlocked state.
!

Device# cellular 0/0/0 lte sim lock 1111
!!!WARNING: SIM will be locked with pin=1111(4).
Do not enter new PIN to lock SIM. Enter PIN that the SIM is configured with.
Call will be disconnected!!!
Are you sure you want to proceed?[confirm]
Device#
Apr 26 21:22:34.555: %CELLWAN-2-MODEM_DOWN: Modem in HWIC slot 0/0 is DOWN
Apr 26 21:23:06.495: %CELLWAN-2-MODEM_UP: Modem in HWIC slot 0/0 is now UP
Device#
Device# sh cellular 0/0/0 security
Card Holder Verification (CHV1) = Enabled
SIM Status = Locked
SIM User Operation Required = Enter CHV1
Number of CHV1 Retries remaining = 3
Device#
!
!   SIM is in locked state. SIM needs to be in locked state for SIM authentication to
!   work.
!

Device#
Device# conf term
Enter configuration commands, one per line. End with CNTL/Z.
Device(config)# controller cellular 0/0
Device(config-controller)# lte sim authenticate 0 1111
CHV1 configured and sent to modem for verification
Device(config-controller)# end

```

```

Device#
Apr 26 21:23:50.571: %SYS-5-CONFIG_I: Configured from console by console
Device#
Device# sh cellular 0/0/0 security
Card Holder Verification (CHV1) = Enabled
SIM Status = OK
SIM User Operation Required = None
Number of CHV1 Retries remaining = 3
Device#
!
! SIM is now in locked state but it can be used for connectivity since authentication is
! good. Authentication can be saved in the router configuration so that when you boot up
! the router with the same locked SIM, connection can be established with the correct
! Cisco IOS configuration.
!

```

Changing the PIN Code: Example

The following example shows how to change the assigned PIN code. The italicized text throughout this configuration example is used to indicate comments and will not be seen when a normal console output is viewed.

```

Device# sh cellular 0/0/0 security
Card Holder Verification (CHV1) = Disabled
SIM Status = OK
SIM User Operation Required = None
Number of CHV1 Retries remaining = 3
Device#
!
! SIM is in unlocked state.
!
Device#
Device# cellular 0/0/0 lte sim lock 1111
!!!WARNING: SIM will be locked with pin=1111(4).
Do not enter new PIN to lock SIM. Enter PIN that the SIM is configured with.
Call will be disconnected!!!
Are you sure you want to proceed?[confirm]
Device#
Apr 26 21:58:11.903: %CELLWAN-2-MODEM_DOWN: Modem in HWIC slot 0/0 is DOWN
Apr 26 21:58:43.775: %CELLWAN-2-MODEM_UP: Modem in HWIC slot 0/0 is now UP
Device#
Device# sh cellular 0/0/0 security
Card Holder Verification (CHV1) = Enabled
SIM Status = Locked
SIM User Operation Required = Enter CHV1
Number of CHV1 Retries remaining = 3
Device#
!
! SIM is in locked state. SIM needs to be in locked state to change its PIN.
!
Device#
Device# cellular 0/0/0 lte sim change-pin 1111 0000
!!!WARNING: SIM PIN will be changed from:1111(4) to:0000(4)
Call will be disconnected. If old PIN is entered incorrectly in 3 attempt(s), SIM will be
blocked!!!
Are you sure you want to proceed?[confirm]
Resetting modem, please wait...

CHV1 code change has been completed. Please enter the new PIN in controller configuration
for verification
Device#
Apr 26 21:59:16.735: %CELLWAN-2-MODEM_DOWN: Modem in HWIC slot 0/0 is DOWN

```



```

Apr 26 21:59:48.387: %CELLWAN-2-MODEM_UP: Modem in HWIC slot 0/0 is now UP
Device#
Device#
Device# sh cellular 0/0/0 security
Card Holder Verification (CHV1) = Enabled
SIM Status = Locked
SIM User Operation Required = Enter CHV1
Number of CHV1 Retries remaining = 3
Device#
!
!   SIM stays in locked state, as expected, but with new PIN.
!
Device# cellular 0/0/0 lte sim unlock 0000
!!!WARNING: SIM will be unlocked with pin=0000(4).
Do not enter new PIN to unlock SIM. Enter PIN that the SIM is configured with.
Call will be disconnected!!!
Are you sure you want to proceed?[confirm]
Device#
Device# show cellular 0/0/0 security
Card Holder Verification (CHV1) = Disabled
SIM Status = OK
SIM User Operation Required = None
Number of CHV1 Retries remaining = 3
Device#
!
!   Unlock with new PIN is successful. Hence, changing PIN was successful.
!

```

Configuring an Encrypted PIN: Example

The following example shows how to configure automatic SIM authentication using an encrypted PIN. The italicized text throughout this configuration example is used to indicate comments and will not be seen when a normal console output is viewed.

```

Device# configure terminal
Enter configuration commands, one per line.  End with CNTL/Z.
Device(config)# service password-encryption
Device(config)# username SIM privilege 0 password 1111
Device(config)# do sh run | i SIM
username SIM privilege 0 password 7 055A575E70.
!
!   Copy the encrypted level 7 PIN. Use this scrambled PIN in the SIM authentication
!   command.
!
Device(config)#
Device(config)# controller cellular 0/0
Device(config-controller)# lte sim authenticate 7 055A575E70
CHV1 configured and sent to modem for verification
Device(config-controller)# exit
Device(config)# no username SIM
Device(config)# end
May 14 20:20:52.603: %SYS-5-CONFIG_I: Configured from console by console

```

SMS Initiated Call Back Configuration: Example

The following example shows how to configure SMS initiated data callback feature on a dialer interface to set up a data connection by sending a text message to the modem and securing the data connection by using the originating (caller's) number to eliminate unauthorized callback requests.

**Note**

The “14001234567” phone number in the example below is the incoming caller’s number.

```

chat-script lte "" "AT!CALL" TIMEOUT 20 "OK"

interface Cellular0/0/0
ip address negotiated
encapsulation slip
dialer in-band
dialer pool-member 1
async mode interactive
routing dynamic
!
interface Dialer1
ip address negotiated
encapsulation slip
dialer pool 1
dialer idle-timeout 0
dialer string lte
dialer caller 14001234567 callback
dialer-group 1
!

ip route 172.22.1.10 255.255.255.255 Cellular0/0/0
dialer-list 1 protocol ip permit
!
    line 0/0/0
    script dialer LTE
    modem InOut
    no exec
    transport input all
    transport output all

```

Dialer-Watch Configuration without External Dialer Interface: Example

The following example shows how to configure the dialer-watch without external dialer interface. The bold text is used to indicate important commands that are specific to the dialer-watch:

```

chat-script lte "" "AT!CALL1" TIMEOUT 20 "OK"
interface Cellular0
ip address negotiated
encapsulation slip
dialer in-band
dialer string LTE
dialer watch-group 1
async mode interactive
!
dialer watch-list 1 ip 5.6.7.8 0.0.0.0
dialer watch-list 1 delay route-check initial 60
dialer watch-list 1 delay connect 1
!
ip route 0.0.0.0 0.0.0.0 cellular 0
line 3
script dialer LTE
modem InOut
no exec
transport input all
transport output all

```

Dialer-Persistent Configuration with External Dialer Interface: Example

The following example shows how to configure the dialer-persistent with external dialer interface. The bold text is used to indicate important commands that are specific to the dialer-persistent:

```
interface Cellular0
ip address negotiated
encapsulation slip
dialer in-band
dialer pool-member 1
async mode interactive
routing dynamic
interface Dialer1
ip address negotiated
encapsulation slip
dialer pool 1
dialer idle-timeout 0
dialer string lte
dialer persistent
dialer-group 1
!
dialer-list 1 protocol ip permit
ip route 0.0.0.0 0.0.0.0 dialer 1
line 3
script dialer lte
modem InOut
no exec
transport input all
transport output all
```

Upgrading the Modem Firmware

Table 5 describes the Sierra Wireless modems that are supported on Cisco 4G LTE EHWICs and Cisco 800 Series 4G LTE ISRs. The firmware for the modem is upgradable using Cisco IOS commands. The firmware is a Crossword Express (cwe) file and can be downloaded from the wireless software download page on Cisco.com.

Table 5 Modem SKUs and Associated Firmware

SKU	Modem	Firmware
<ul style="list-style-type: none"> • EHWIC-4G-LTE-A • C819G-4G-A-K9 • C819HG-4G-A-K9 	MC7700	FW 3.5.10.2
<ul style="list-style-type: none"> • EHWIC-4G-LTE-G • C819G-4G-G-K9 • C819HG-4G-G-K9 	MC7710	FW 3.5.29.04
<ul style="list-style-type: none"> • EHWIC-4G-LTE-V • C819G-4G-V-K9 • C819HG-4G-V-K9 	MC7750	FW 3.5.10.6

Table 5 Modem SKUs and Associated Firmware

SKU	Modem	Firmware
<ul style="list-style-type: none"> • EHWIC-4G-LTE-AU • C819G-4G-GA-K9 • C881G-4G-GA-K9 • C887VAG-4G-GA-K9 • C896VAG-LTE-GA-K9 • C897VAG-LTE-GA-K9 • C898EAG-LTE-GA-K9 • C899G-LTE-GA-K9 	MC7304	FW 5.5.26.02
<ul style="list-style-type: none"> • EHWIC-4G-LTE-GB • C897VAMG-LTE-GA-K9 	MC7304	FW 5.5.47.0

**Caution**

Use only Cisco certified firmware. Using a firmware version not certified by Cisco may impact the wireless service provider network adversely.

**Caution**

Do not disconnect power or switch the router off during the firmware upgrade process. This may result in permanent modem failure.

**Note**

Firmware downgrade is not supported.

**Note**

The 3.5.x firmware must have a 15.2(4)M3 or later software image.

Upgrading the Modem Firmware Manually

Cisco recommends the manual upgrade process for the LTE modem firmware and IOS software image for all new deployments and the following existing deployments:

- LTE is not the primary ISR WAN interface.
- LTE is not the only ISR WAN interface.
- The network administrator has out-of-band or local access to the ISR.

**Note**

You can also remotely download firmware over the air by following the same steps listed below.

SUMMARY STEPS

- Step 1** Go to the following Cisco web page to download the latest certified firmware for your carrier:

<http://software.cisco.com/download/navigator.html>

**Note**


For remote download, you can transfer this using the 4G wireless link from Cisco.com onto flash. You must configure external dialer and dialer persistent to bring the interface and the dialer up again.

Step 2 On this page, select from the following options.

Products -> Cisco Interfaces and Modules -> Cisco High-Speed WAN Interface Cards

Step 3 After clicking on the **Cisco High-Speed WAN interface Cards** selection, a list of available cards displays in the third column as shown in [Figure 4](#). Select your product in the third column and download the appropriate LTE firmware.

Figure 4 Cisco Download Software Web Page

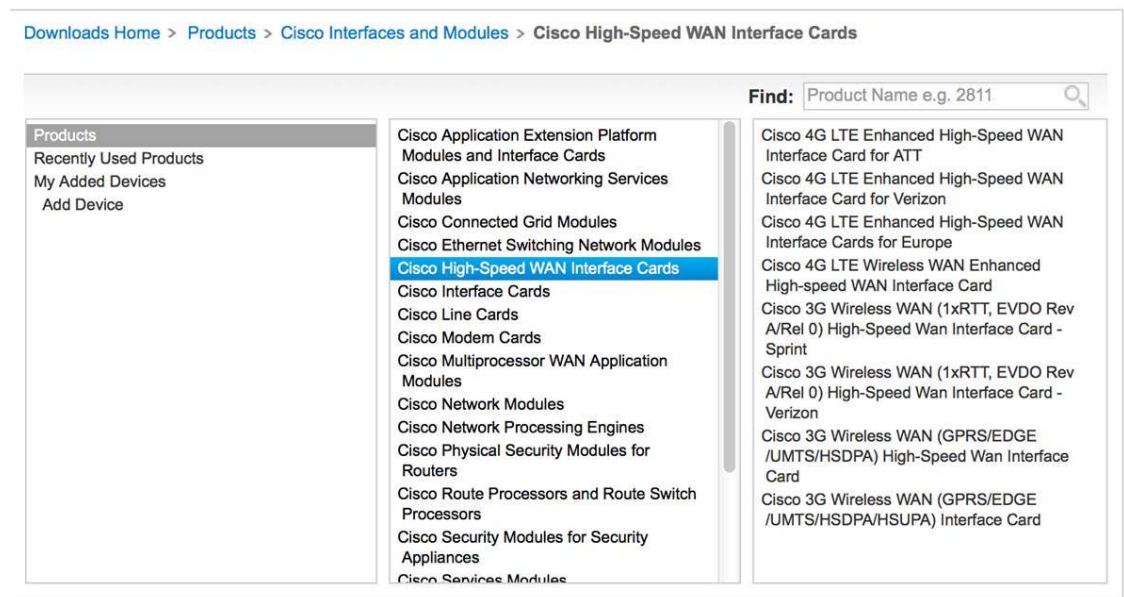

Step 4 Enable the logging console.

Step 5 Initiate the firmware upgrade process.



**Note**

For remote downloads, if wireless is your primary link, you will lose connectivity. Connectivity is restored after the download. If you have opted for logging in [Step 5](#), the firmware log file will be available on flash with the download status.

Step 6 Verify the upgrade process.

Step 7 Reload the ISR to complete the upgrade process.

DETAILED STEPS

	Command or Action	Purpose
Step 1	Go to the Cisco Wireless WAN software download website at: http://software.cisco.com/download/navigator.html	Provides access to Cisco Wireless WAN software downloads. Select firmware for Cisco 4G.  Note This website is only available to registered Cisco.com users.
Step 2	On this page, select from the following options: Products -> Cisco Interfaces and Modules -> Cisco High-Speed WAN Interface Cards	After the Cisco High-Speed WAN interface Cards is selected, a list of available cards displays in the third column as shown in Figure 4 . Select your product in the third column and download the appropriate LTE firmware.
Step 3	Download the selected LTE firmware release.	Download the modem firmware file to flash memory on the router.
Step 4	<code>terminal monitor</code> Example: Device# terminal monitor	Enables the logging console in privileged EXEC mode.
Step 5	<code>microcode reload cellular pa-bay slot</code> <code>modem-provision flash: filename</code> Example: Device# microcode reload cellular 0 1 modem-provision flash:<filename>.cwe F/W Upgrade: Complete Successfully	Initiates the firmware upgrade process. <ul style="list-style-type: none">• <i>pa-bay</i>—Use 0 for EHWIC and Cisco 819, 880 and 890 Series ISR.• <i>slot</i>—For EHWIC, slot number, 0 to 3, where the EHWIC is plugged in. For Cisco 819, 880, and 890 4G LTE Series ISR, use 0.  Note For remote download, you can transfer this using the wireless link from Cisco.com onto flash. You must configure external dialer and dialer persistent to bring the interface and the dialer up again prior to the upgrade.

	Command or Action	Purpose
Step 6	<p>For the Cisco 4G LTE EHWIC:</p> <pre>show cellular unit</pre> <p>For the Cisco 819 Series 4G LTE ISRs, Cisco C880 Series 4G LTE ISRs, and Cisco C890 Series 4G LTE ISRs:</p> <pre>show cellular 0 hardware</pre> <p>Example: Device# show cellular 0 hardware</p> <pre>Modem Firmware Version = SWI9200X_03.05.10.02 Modem Firmware built = 2012/02/25 11:58:38</pre>	<p>Verifies the firmware upgrade process.</p>
Step 7	<pre>reload</pre>	<p>Reloads the IOS application software image to complete the firmware upgrade.</p> <p>Note Ensure that you are reloading an IOS software image that is 15.2(4)M3 or later.</p>

MC7700 Manual Modem Firmware Upgrade: Example

```
Device# microcode reload cellular 0 0 modem-provision flash:MC7700_ATT_03.05.10.02_00.cwe
Reload microcode? [confirm] <hit enter key>
Log status of firmware download in router flash?[confirm] <hit enter key>
Firmware download status will be logged in flash:fwlogfile
Microcode Reload Process launched for Cellular 37946756; hw type = 0x6F3
Device#
*****
The interface will be Shut Down for Firmware Upgrade
This will terminate any active data connections.
*****
Modem radio has been turned off
*****
Modem will be upgraded!
Upgrade process will take up to 15 minutes. During
this time the modem will be unusable.
Please do not remove power or reload the router during
the upgrade process.
*****
Sending F/W[MC7700_ATT_03.05.10.02_00.cwe] to the card [41569157 bytes]:
Firmware file: MC7700_ATT_03.05.10.02_00.cwe sent to the card

The current modem F/W App Version: SWI9200X_01.00.03.01AP R2492 CARMD-EN-10526 2011/07/01
19:31:09
The current modem F/W Boot Version: SWI9200X_01.00.03.01BT R2492 CARMD-EN-10526 2011/07/01
19:28:52
The current modem Carrier String: 5
The current modem Device ID: MC7700
The current modem Package Identifier: MC7700_01.00.03.01_00_vzw_020.006_001
The current modem SKU ID: 1584083
FW Upgrade: In the progress.
*Feb 21 23:39:35.407: %CISCO800-2-MODEM_DOWN: Cellular0 modem is now DOWN.
F/W Upgrade: Complete Successfully
*Feb 21 23:42:00.475: %CISCO800-2-MODEM_UP: Cellular0 modem is now UP.
*Feb 21 23:42:00.475: %CISCO800-2-MODEM_DOWN: Cellular0 modem is now DOWN.
*Feb 21 23:42:05.475: %CISCO800-2-MODEM_UP: Cellular0 modem is now UP.
Modem radio has been turned on
```

```
Device#show cellular 0 hardware | incl Modem Firmware Version
Modem Firmware Version = SWI9200X_03.05.10.02
```

MC7710 Manual Modem Firmware Upgrade: Example

```
Device# microcode reload cellular 0 0 modem-provision
flash:MC7710_Global_03.05.19.04_00.cwe
Reload microcode? [confirm] <hit enter key>
Log status of firmware download in router flash?[confirm] <hit enter key>
Firmware download status will be logged in flash:fwlogfile
Microcode Reload Process launched for Cellular 37946756; hw type = 0x6F3
Device#
*****
The interface will be Shut Down for Firmware Upgrade
This will terminate any active data connections.
*****
Modem radio has been turned off
*****
Modem will be upgraded!
Upgrade process will take up to 15 minutes. During
this time the modem will be unusable.
Please do not remove power or reload the router during
the upgrade process.
*****
Sending F/W[MC7710_Global_03.05.19.04_00.cwe] to the card [41569157 bytes]:
Firmware file: MC7710_Global_03.05.19.04_00.cwe sent to the card

The current modem F/W App Version: SWI9200X_03.00.11.00AP R2492 CARMD-EN-10526 2011/07/01
19:31:09
The current modem F/W Boot Version: SWI9200X_03.00.11.00BT R2492 CARMD-EN-10526 2011/07/01
19:28:52
The current modem Carrier String: 5
The current modem Device ID: MC7710
The current modem Package Identifier: MC7710_03.00.11.00_00_vzw_020.006_001
The current modem SKU ID: 1584083
FW Upgrade: In the progress.
*Feb 21 23:39:35.407: %CISCO800-2-MODEM_DOWN: Cellular0 modem is now DOWN.
F/W Upgrade: Complete Successfully
*Feb 21 23:42:00.475: %CISCO800-2-MODEM_UP: Cellular0 modem is now UP.
*Feb 21 23:42:00.475: %CISCO800-2-MODEM_DOWN: Cellular0 modem is now DOWN.
*Feb 21 23:42:05.475: %CISCO800-2-MODEM_UP: Cellular0 modem is now UP.
Modem radio has been turned on
Device# show cellular 0 hardware | incl Modem Firmware Version
Modem Firmware Version = SWI9200X_03.05.19.04
```

MC7750 Manual Modem Firmware Upgrade: Example

```
Device# microcode reload cellular 0 0 modem-provision flash:MC7750_VZW_03.05.10.06_00.cwe
Reload microcode? [confirm] <hit enter key>
Log status of firmware download in router flash?[confirm] <hit enter key>
Firmware download status will be logged in flash:fwlogfile
Microcode Reload Process launched for Cellular 37946756; hw type = 0x6F3
Device#
*****
The interface will be Shut Down for Firmware Upgrade
This will terminate any active data connections.
*****
Modem radio has been turned off
*****
Modem will be upgraded!
Upgrade process will take up to 15 minutes. During
```



```

this time the modem will be unusable.
Please do not remove power or reload the router during
the upgrade process.
*****
Sending F/W[MC7750_VZW_03.05.10.06_00.cwe] to the card [41569157 bytes]:
Firmware file: MC7750_VZW_03.05.10.06_00.cwe sent to the card

The current modem F/W App Version: SWI9600M_01.00.09.03AP R2492 CARMD-EN-10526 2011/07/01
19:31:09
The current modem F/W Boot Version: SWI9600M_01.00.09.03BT R2492 CARMD-EN-10526 2011/07/01
19:28:52
The current modem Carrier String: 5
The current modem Device ID: MC7750
The current modem Package Identifier: MC7750_01.00.09.03_00_vzw_020.006_001
The current modem SKU ID: 1584083
FW Upgrade: In the progress.
*Feb 21 23:39:35.407: %CISCO800-2-MODEM_DOWN: Cellular0 modem is now DOWN.
F/W Upgrade: Complete Successfully
*Feb 21 23:42:00.475: %CISCO800-2-MODEM_UP: Cellular0 modem is now UP.
*Feb 21 23:42:00.475: %CISCO800-2-MODEM_DOWN: Cellular0 modem is now DOWN.
*Feb 21 23:42:05.475: %CISCO800-2-MODEM_UP: Cellular0 modem is now UP.
Modem radio has been turned on
Device#show cellular 0 hardware | incl Modem Firmware Version
Modem Firmware Version = SWI9600M_03.05.10.06

```

Upgrading the Modem Firmware Using the EEM Scripts

For existing field deployments where LTE is the only WAN interface, and there is no local or out-of-band administrative access to the ISR, an automated upgrade method using a Cisco IOS Embedded Event Manager (EEM) script is recommended. The EEM script upgrades the modem firmware and reloads the ISR with the IOS software image that is compatible with the new firmware release.

Downloading the Modem Firmware and Installing the EEM Scripts

SUMMARY STEPS

-
- Step 1** Go to the following Cisco web page to download the latest certified firmware for your carrier:
<http://software.cisco.com/download/navigator.html>




Note For remote download, you can transfer this using the 4G wireless link from Cisco.com onto flash. You must configure external dialer and dialer persistent to bring the interface and the dialer up again.

- Step 2** On this page, select from the following options.
Products -> Cisco Interfaces and Modules -> Cisco High-Speed WAN Interface Cards
- Step 3** After clicking on the **Cisco High-Speed WAN interface Cards** selection, a list of available cards displays in the third column as shown in [Figure 4](#). Select your product in the third column and download the appropriate LTE firmware.
- Step 4** Select your product in the third column and download the appropriate LTE firmware to flash memory on your router.
- Step 5** Delete any **boot system flash:** commands from the running configuration.
- Step 6** Enable the logging console.

- Step 7** **configure terminal**
- Step 8** Install the EEM scripts on the router.
- Step 9** Verify that the policy is registered.

DETAILED STEPS

	Command or Action	Purpose
Step 1	Go to the Cisco Wireless WAN software download website at: http://software.cisco.com/download/navigator.html	Provides access to Cisco Wireless WAN software downloads. Select firmware for Cisco 4G.  Note This website is only available to registered Cisco.com users.
Step 2	On this page, select from the following options: Products -> Cisco Interfaces and Modules -> Cisco High-Speed WAN Interface Cards	After the Cisco High-Speed WAN interface Cards is selected, a list of available cards displays in the third column as shown in Figure 4 . Select your product in the third column and download the appropriate LTE firmware.
Step 3	Download the selected LTE firmware release.	Download the modem firmware file to flash memory on the router.
Step 4	<code>no boot system flash:filename</code> Example: Device(config)# no boot system flash:cxxx-universalk9-mz.SPA.152-4.M2	Deletes any boot system flash: commands from the running configuration in global configuration mode.
Step 5	<code>terminal monitor</code> Example: Device# terminal monitor	Enables the logging console in privileged EXEC mode.
Step 6	<code>configure terminal</code> Example: Device# configure terminal	Enters global configuration mode.

	Command or Action	Purpose
Step 7	Copy EEM Script 1 and EEM Script 2 for your modem (see the following this section) and paste this text into the router's running configuration.	<p>Installs the EEM scripts on the router.</p> <p>Note The EEM script is written assuming that the ISR is initially running the IOS interim image for LTE. If the router is running IOS 15.2(4)M2, replace the following line in the script before executing:</p> <pre>action 1.3.4 set old_IOS "c\$platform-universalk9-mz.SSA.V152_4_M_LTE"</pre> <p>with:</p> <pre>action 1.3.4 set old_IOS "c\$platform-universalk9-mz.SPA.152-4.M2"</pre>
Step 8	<p>show event manager policy registered</p> <p>Example: Device# show event manager policy registered</p>	<p>Verifies that the policy is registered.</p> <p>Note Ensure that every line of the script has registered properly.</p>

EEM Script 1 for MC7700 Modem

```

event manager applet FW authorization bypass
event none maxrun 1200
action 1.0 if $_none_argc ne "1"
action 1.0.1 syslog msg "Incorrect number of arguments passed. Please check and try
again"
action 1.0.2 exit
action 1.0.3 end
action 1.1 cli command "enable"
action 1.2 set slot_number "$_none_arg1"
action 1.3 cli command "show version | incl System image file"
action 1.3.1 regexp "(.*)c(.*)-universalk9-(.*)\" "$_cli_result" _match _sub1 _sub2 _sub3
action 1.3.2 set platform "$_sub2"
action 1.3.3 set current_IOS "c$_sub2-universalk9-$_sub3"
action 1.3.4 set old_IOS "c$platform-universalk9-mz.SPA.152-4.M2"
action 1.3.5 set new_IOS "c$platform-universalk9-mz.SPA.152-4.M3"
action 1.3.6 set firmware "MC7700_ATT_03.05.10.02_00.cwe"
action 1.3.7 set old_firmware "SWI9200X_01.00.03.01"
action 1.3.8 set new_firmware "SWI9200X_03.05.10.02"
action 1.4 if $platform eq "800"
action 1.4.1 set cellular_interface 0
action 1.5 else
action 1.5.1 set cellular_interface "0/$slot_number/0"
action 1.5.2 end
action 1.6 cli command "show cellular $cellular_interface hardware | incl Modem Firmware
Version"
action 1.7 string first "$new_firmware" "$_cli_result"
action 1.8 if $_string_result ge 0
action 1.8.1 syslog msg "Modem is already on new firmware $new_firmware. Exiting
upgrade!!"
action 1.8.2 exit
action 1.8.3 end
action 2.1 if $current_IOS ne $old_IOS
action 2.1.1 syslog msg "Current IOS version is incorrect. Please run $old_IOS before
starting upgrade. Exiting upgrade!!"
action 2.1.2 exit
action 2.2 end
action 2.3 cli command "show flash: | incl $new_IOS"
action 3.0 string first "$new_IOS" "$_cli_result"

```

```

action 3.1 if $_string_result lt 0
action 3.1.1 syslog msg "$new_IOS is not present in flash. Exiting upgrade!!"
action 3.1.2 exit
action 3.2 end
action 3.3 cli command "show flash: | incl $firmware"
action 5.0 string first "$firmware" "$_cli_result"
action 5.1 if $_string_result lt 0
action 5.1.1 syslog msg "$firmware is not present in flash. Exiting upgrade!!"
action 5.1.2 exit
action 5.2 end
action 5.3 cli command "configure terminal"
action 5.4 cli command "no boot system"
action 5.5 cli command "end"
action 6.1 cli command "microcode reload cellular 0 $slot_number modem-provision
flash:$firmware" pattern "confirm"
action 6.2 cli command "y"
action 6.3 wait 400
action 6.4 cli command "event manager run router_reload $old_IOS $new_IOS $old_firmware
$cellular_interface"
action 6.5 wait 120
action 6.6 exit

```

EEM Script 2 for MC7700 Modem

```

event manager applet router_reload authorization bypass
event none maxrun 120
action 1.0 set old_IOS "$_none_arg1"
action 1.1 set new_IOS "$_none_arg2"
action 1.2 set old_firmware "$_none_arg3"
action 1.3 set cellular_interface "$_none_arg4"
action 1.4 cli command "enable"
action 2.0 cli command "show cellular $cellular_interface hardware | inc Modem Firmware
Version"
action 2.1 set _string_result "0"
action 2.2 string first "$old_firmware" "$_cli_result"
action 2.3 if $_string_result ge "0"
action 2.3.1 set boot_IOS "$old_IOS"
action 2.3.2 syslog msg "Firmware did not Upgrade successfully. Please try again after
reload"
action 2.4 else
action 2.4.1 set boot_IOS "$new_IOS"
action 2.4.2 syslog msg "Firmware upgraded successfully. value= $_string_result"
action 2.4.3 end
action 2.5 cli command "configure terminal"
action 2.5.1 cli command "boot system flash:$boot_IOS"
action 2.5.2 cli command "config-register 0x2102"
action 2.5.3 cli command "interface cellular $cellular_interface"
action 2.5.4 cli command "no shut"
action 2.5.5 cli command "end"
action 2.5.6 cli command "write memory"
action 2.5.7 reload

```

EEM Script 1 for MC7710 Modem

```

event manager applet FW authorization bypass
event none maxrun 1200
action 1.0 if $_none_argc ne "1"
action 1.0.1 syslog msg "Incorrect number of arguments passed. Please check and try
again"
action 1.0.2 exit
action 1.0.3 end
action 1.1 cli command "enable"
action 1.2 set slot_number "$_none_arg1"

```

```

action 1.3 cli command "show version | incl System image file"
action 1.3.1 regexp "(.*)c(.*)-universalk9-(.*)\" \"$cli_result\" _match _sub1 _sub2 _sub3
action 1.3.2 set platform "$_sub2"
action 1.3.3 set current_IOS "c$_sub2-universalk9-$_sub3"
action 1.3.4 set old_IOS "c$platform-universalk9-mz.SPA.152-4.M2"
action 1.3.5 set new_IOS "c$platform-universalk9-mz.SPA.152-4.M3"
action 1.3.6 set firmware "MC7710_Global_03.05.19.04_00.cwe"
action 1.3.7 set old_firmware "SWI9200X_03.00.11.00"
action 1.3.8 set new_firmware "SWI9200X_03.05.19.04"
action 1.4 if $platform eq "800"
action 1.4.1 set cellular_interface 0
action 1.5 else
action 1.5.1 set cellular_interface "0/$slot_number/0"
action 1.5.2 end
action 1.6 cli command "show cellular $cellular_interface hardware | incl Modem Firmware
Version"
action 1.7 string first "$new_firmware" "$cli_result"
action 1.8 if $_string_result ge 0
action 1.8.1 syslog msg "Modem is already on new firmware $new_firmware. Exiting
upgrade!!"
action 1.8.2 exit
action 1.8.3 end
action 2.1 if $current_IOS ne $old_IOS
action 2.1.1 syslog msg "Current IOS version is incorrect. Please run $old_IOS before
starting upgrade. Exiting upgrade!!"
action 2.1.2 exit
action 2.2 end
action 2.3 cli command "show flash: | incl $new_IOS"
action 3.0 string first "$new_IOS" "$cli_result"
action 3.1 if $_string_result lt 0
action 3.1.1 syslog msg "$new_IOS is not present in flash. Exiting upgrade!!"
action 3.1.2 exit
action 3.2 end
action 3.3 cli command "show flash: | incl $firmware"
action 5.0 string first "$firmware" "$cli_result"
action 5.1 if $_string_result lt 0
action 5.1.1 syslog msg "$firmware is not present in flash. Exiting upgrade!!"
action 5.1.2 exit
action 5.2 end
action 5.3 cli command "configure terminal"
action 5.4 cli command "no boot system"
action 5.5 cli command "end"
action 6.1 cli command "microcode reload cellular 0 $slot_number modem-provision
flash:$firmware" pattern "confirm"
action 6.2 cli command "y"
action 6.3 wait 400
action 6.4 cli command "event manager run router_reload $old_IOS $new_IOS $old_firmware
$cellular_interface"
action 6.5 wait 120
action 6.6 exit

```

EEM Script 2 for MC7710 Modem

```

event manager applet router_reload authorization bypass
event none maxrun 120
action 1.0 set old_IOS "$_none_arg1"
action 1.1 set new_IOS "$_none_arg2"
action 1.2 set old_firmware "$_none_arg3"
action 1.3 set cellular_interface "$_none_arg4"
action 1.4 cli command "enable"
action 2.0 cli command "show cellular $cellular_interface hardware | inc Modem Firmware
Version"
action 2.1 set _string_result "0"

```

```

action 2.2 string first "$old_firmware" "$_cli_result"
action 2.3 if $_string_result ge "0"
action 2.3.1 set boot_IOS "$old_IOS"
action 2.3.2 syslog msg "Firmware did not Upgrade successfully. Please try again after
reload"
action 2.4 else
action 2.4.1 set boot_IOS "$new_IOS"
action 2.4.2 syslog msg "Firmware upgraded successfully. value= $_string_result"
action 2.4.3 end
action 2.5 cli command "configure terminal"
action 2.5.1 cli command "boot system flash:$boot_IOS"
action 2.5.2 cli command "config-register 0x2102"
action 2.5.3 cli command "interface cellular $cellular_interface"
action 2.5.4 cli command "no shut"
action 2.5.5 cli command "end"
action 2.5.6 cli command "write memory"
action 2.5.7 reload

```

EEM Script 1 for MC7750 Modem

```

event manager applet FW authorization bypass
event none maxrun 1200
action 1.0 if $_none_argc ne "1"
action 1.0.1 syslog msg "Incorrect number of arguments passed. Please check and try
again"
action 1.0.2 exit
action 1.0.3 end
action 1.1 cli command "enable"
action 1.2 set slot_number "$_none_arg1"
action 1.3 cli command "show version | incl System image file"
action 1.3.1 regexp "(.*)c(.*)-universalk9-(.*)\" \"$_cli_result" _match _sub1 _sub2 _sub3
action 1.3.2 set platform "$_sub2"
action 1.3.3 set current_IOS "c$_sub2-universalk9-$_sub3"
action 1.3.4 set old_IOS "c$_platform-universalk9-mz.SSA.V152_4_M_LTE"
action 1.3.5 set new_IOS "c$_platform-universalk9-mz.SPA.152-4.M3"
action 1.3.6 set firmware "MC7750_VZW_03.05.10.06_00.cwe"
action 1.3.7 set old_firmware "SWI9600M_01.00.09.03"
action 1.3.8 set new_firmware "SWI9600M_03.05.10.06"
action 1.4 if $platform eq "800"
action 1.4.1 set cellular_interface 0
action 1.5 else
action 1.5.1 set cellular_interface "0/$slot_number/0"
action 1.5.2 end
action 1.6 cli command "show cellular $cellular_interface hardware | incl Modem Firmware
Version"
action 1.7 string first "$new_firmware" "$_cli_result"
action 1.8 if $_string_result ge 0
action 1.8.1 syslog msg "Modem is already on new firmware $new_firmware. Exiting
upgrade!!"
action 1.8.2 exit
action 1.8.3 end
action 2.1 if $current_IOS ne $old_IOS
action 2.1.1 syslog msg "Current IOS version is incorrect. Please run $old_IOS before
starting upgrade. Exiting upgrade!!"
action 2.1.2 exit
action 2.2 end
action 2.3 cli command "show flash: | incl $new_IOS"
action 3.0 string first "$new_IOS" "$_cli_result"
action 3.1 if $_string_result lt 0
action 3.1.1 syslog msg "$new_IOS is not present in flash. Exiting upgrade!!"
action 3.1.2 exit
action 3.2 end
action 3.3 cli command "show flash: | incl $firmware"

```

```

action 5.0 string first "$firmware" "$_cli_result"
action 5.1 if $_string_result lt 0
action 5.1.1 syslog msg "$firmware is not present in flash. Exiting upgrade!!"
action 5.1.2 exit
action 5.2 end
action 5.3 cli command "configure terminal"
action 5.4 cli command "no boot system"
action 5.5 cli command "end"
action 6.1 cli command "microcode reload cellular 0 $slot_number modem-provision
flash:$firmware" pattern "confirm"
action 6.2 cli command "y"
action 6.3 wait 400
action 6.4 cli command "event manager run router_reload $old_IOS $new_IOS $old_firmware
$cellular_interface"
action 6.5 wait 120
action 6.6 exit

```

EEM Script 2 for MC7750 Modem

```

event manager applet router_reload authorization bypass
event none maxrun 120
action 1.0 set old_IOS "$_none_arg1"
action 1.1 set new_IOS "$_none_arg2"
action 1.2 set old_firmware "$_none_arg3"
action 1.3 set cellular_interface "$_none_arg4"
action 1.4 cli command "enable"
action 2.0 cli command "show cellular $cellular_interface hardware | inc Modem Firmware
Version"
action 2.1 set _string_result "0"
action 2.2 string first "$old_firmware" "$_cli_result"
action 2.3 if $_string_result ge "0"
action 2.3.1 set boot_IOS "$old_IOS"
action 2.3.2 syslog msg "Firmware did not Upgrade successfully. Please try again after
reload"
action 2.4 else
action 2.4.1 set boot_IOS "$new_IOS"
action 2.4.2 syslog msg "Firmware upgraded successfully. value= $_string_result"
action 2.4.3 end
action 2.5 cli command "configure terminal"
action 2.5.1 cli command "boot system flash:$boot_IOS"
action 2.5.2 cli command "config-register 0x2102"
action 2.5.3 cli command "interface cellular $cellular_interface"
action 2.5.4 cli command "no shut"
action 2.5.5 cli command "end"
action 2.5.6 cli command "write memory"
action 2.5.7 reload

```

Running the EEM Scripts on the Router to Upgrade the Modem

SUMMARY STEPS

-
- Step 1** event manager run fw *slot-number*
 - Step 2** show cellular *slot* hardware

DETAILED STEPS

	Command or Action	Purpose
Step 1	<pre>event manager run fw slot-number</pre> <p>Example: Device# event manager run fw 1</p>	<p>Identifies the EHWIC-4G-LTE slot number.</p> <p>Note For 800 Series 4G LTE ISR platforms, the slot number is 0. For the 1900, 2900, or 3900 platforms with EHWICs, the slot number identifies the ISR slot where EHWIC-4G-LTE is inserted.</p>
Step 2	<pre>show cellular slot hardware</pre> <p>Example: Device# show cellular 0 hardware</p> <pre>Modem Firmware Version = SWI9200X_03.05.10.02 Modem Firmware built = 2012/02/25 11:58:38</pre>	<p>Verifies that the upgrade was successful. If the upgrade was successful, a message similar to the one shown in the example should appear.</p>

Removing EEM Scripts from the Router once the Modem Upgrades Successfully

SUMMARY STEPS

-
- Step 1 **configure terminal**
 - Step 2 **no event manager applet FW**
 - Step 3 **no event manager applet router_reload**
 - Step 4 **end**
 - Step 5 **write memory**

DETAILED STEPS

	Command or Action	Purpose
Step 1	<pre>configure terminal</pre> <p>Example: Device# configure terminal</p>	<p>Enters global configuration mode.</p>
Step 2	<pre>no event manager applet applet-name</pre> <p>Example: Device(config)# no event manager applet FW Device(config)# no event manager applet router_reload</p>	<p>Deregisters the applet with the Embedded Event Manager (EEM) and enters applet configuration mode for this applet.</p>

	Command or Action	Purpose
Step 3	<code>end</code> Example: Device(config)# <code>end</code>	Exits global configuration mode and enters privileged EXEC mode.
Step 4	<code>write memory</code> Example: Device# <code>write memory</code>	Saves the running configuration to NVRAM on the ISR.

SNMP MIBs

The following Simple Management Network Protocol (SNMP) MIBs are supported on Cisco 4G LTE WWAN EHWICs, Cisco 819 Series 4G LTE ISRs and Cisco C880 Series 4G LTE ISRs and Cisco C890 Series 4G LTE Series ISRs:

- IF-MIB
- ENTITY-MIB
- CISCO-WAN-3G-MIB

For the CISCO-WAN-3G-MIB, the following tables and sub-tables are supported for 3G and LTE technologies:

- ciscoWan3gMIB(661)
- ciscoWan3gMIBNotifs(0)
- ciscoWan3gMIBObjects(1)
- c3gWanCommonTable(1)
- c3gWanGsm(3)
- c3gGsmIdentityTable(1)
- c3gGsmNetworkTable(2)
- c3gGsmPdpProfile(3)
- c3gGsmPdpProfileTable(1)
- c3gGsmPacketSessionTable(2)
- c3gGsmRadio(4)
- c3gGsmRadioTable(1)
- c3gGsmSecurity(5)
- c3gGsmSecurityTable(1)

You can download the MIBs from the Cisco MIB Locator at <http://www.cisco.com/go/mibs>.

SNMP 4G LTE Configuration: Example

The following example describes how to configure SNMP capability on the router:

```
snmp-server group neomobilityTeam v3 auth notify 3gView
snmp-server view 3gView ciscoWan3gMIB included
```

```
snmp-server community neomobility-test RW
snmp-server community public RW
snmp-server enable traps c3g
snmp-server host 172.19.153.53 neomobility c3g
snmp-server host 172.19.152.77 public c3g
snmp-server host 172.19.152.77 public udp-port 6059
```

The following example describes how to configure an external host device to communicate with the router through SNMP:

```
setenv SR_MGR_CONF_DIR /users/<userid>/mibttest
setenv SR_UTIL_COMMUNITY neomobility-test
setenv SR_UTIL_SNMP_VERSION -v2c
setenv SR_TRAP_TEST_PORT 6059
```

Troubleshooting

This section provides the necessary background information and resources available for troubleshooting the Cisco 4G-LTE Wireless WAN EHWIC.

For LED descriptions, see [Cisco 4G LTE Wireless WAN EHWIC](#).

- [Verifying Data Call Setup, page 79](#)
- [Checking Signal Strength, page 80](#)
- [Verifying Service Availability, page 80](#)
- [Successful Call Setup, page 81](#)
- [Modem Troubleshooting Using Integrated Modem DM Logging, page 82](#)
- [Modem Settings for North America and Carriers Operating on 700 MHz Band, page 82](#)

Verifying Data Call Setup

To verify the data call setup, follow these steps:

-
- Step 1** After you create a modem data profile using the **cellular profile create** command and configuring DDR on the cellular interface, send a ping from the router to a host across the wireless network.
- Step 2** If the ping fails, debug the failure by using the following **debug** and **show** commands:
- **debug chat**
 - **debug modem**
 - **debug dialer**
 - **show cellular all**
 - **show interface cellular**
 - **show running-config**
 - **show ip route**
- Step 3** Save the output from these commands and contact your system administrator.
-

Checking Signal Strength

If the Received Signal Strength Indication (RSSI) level is very low (for example, if it is less than -110 dBm), follow these steps:

-
- Step 1** Check the antenna connection. Make sure the TNC connector is correctly threaded and tightened.
 - Step 2** If you are using a remote antenna, move the antenna cradle and check if the RSSI has improved.
 - Step 3** Contact your wireless service provider to verify if there is service availability in your area.
-

Verifying Service Availability

The following is a sample output for the **show cellular all** command for a scenario where the antenna is disconnected and a modem data profile has not been created. The errors in this case have been highlighted with >>>>>>.

```
Device# show cellular 0/0/0 all

Hardware Information
=====
Modem Firmware Version = SWI9600M_01.00.09.03
Modem Firmware built = 2011/07/01 19:31:09
Hardware Version = 20460000
International Mobile Subscriber Identity (IMSI) = <specific sim number>
International Mobile Equipment Identity (IMEI) = <specific modem number>
Electronic Serial Number (ESN) = <specific ESN in Hex> [specific ESN in Dec]
Integrated Circuit Card ID (ICCID) = <specific ICCID number>
Mobile Subscriber International Subscriber
IDentity Number (MSISDN) = <specific phone number>

Profile Information
=====
* - Default profile >>>>>> no profile here.

Data Connection Information
=====

Profile 1, Packet Session Status = INACTIVE
    Inactivity Reason = Normal inactivate state
Profile 2, Packet Session Status = INACTIVE
    Inactivity Reason = Normal inactivate state
Profile 3, Packet Session Status = INACTIVE
    Inactivity Reason = Normal inactivate state
Profile 4, Packet Session Status = INACTIVE
    Inactivity Reason = Normal inactivate state
Profile 5, Packet Session Status = INACTIVE
    Inactivity Reason = Normal inactivate state
Profile 6, Packet Session Status = INACTIVE
    Inactivity Reason = Normal inactivate state
Profile 7, Packet Session Status = INACTIVE
    Inactivity Reason = Normal inactivate state
Profile 8, Packet Session Status = INACTIVE
    Inactivity Reason = Normal inactivate state
Profile 9, Packet Session Status = INACTIVE
    Inactivity Reason = Normal inactivate state
Profile 10, Packet Session Status = INACTIVE
```

```

        Inactivity Reason = Normal inactivate state
Profile 11, Packet Session Status = INACTIVE
        Inactivity Reason = Normal inactivate state
Profile 12, Packet Session Status = INACTIVE
        Inactivity Reason = Normal inactivate state
Profile 13, Packet Session Status = INACTIVE
        Inactivity Reason = Normal inactivate state
Profile 14, Packet Session Status = INACTIVE
        Inactivity Reason = Normal inactivate state
Profile 15, Packet Session Status = INACTIVE
        Inactivity Reason = Normal inactivate state
Profile 16, Packet Session Status = INACTIVE
        Inactivity Reason = Normal inactivate state

```

Network Information

```
=====
```

```

Current Service Status = No service, Service Error = None    >>>>>> no service means not
connected to the network.
Current Service = Packet Switched
Current Roaming Status = Home
Network Selection Mode = Automatic
Country = , Network =
Mobile Country Code (MCC) = 0
Mobile Network Code (MNC) = 0

```

Radio Information

```
=====
```

```

Radio power mode = Online
Current RSSI = -125 dBm    >>>>>> either no antenna, or bad antenna or out of
network.
Radio power mode = Online
LTE Technology Selected = LTE

```

Modem Security Information

```
=====
```

```

Card Holder Verification (CHV1) = Disabled
SIM Status = OK
SIM User Operation Required = None
Number of CHV1 Retries remaining = 3

```

Successful Call Setup

The following is a sample output when a call is set up using a chat script. It shows a received IP address from the network. Call setup is successful and data path is open.

```
debugs
```

```

debug modem
debug chat

```

```
Device#
```

```

Aug 25 18:46:59.604: CHAT0/0/0: Attempting async line dialer script
Aug 25 18:46:59.604: CHAT0/0/0: Dialing using Modem script: lte & System script: none
Aug 25 18:46:59.604: CHAT0/0/0: process started
Aug 25 18:46:59.604: CHAT0/0/0: Asserting DTR
Aug 25 18:46:59.604: CHAT0/0/0: Chat script lte started
Aug 25 18:46:59.604: CHAT0/0/0: Sending string: AT!CALL
Aug 25 18:46:59.604: CHAT0/0/0: Expecting string: OK

```

```

Aug 25 18:47:00.641: CHAT0/0/0: Completed match for expect: OK
Aug 25 18:47:00.641: CHAT0/0/0: Chat script lte finished, status = Success
Aug 25 18:47:00.641: TTY0/0/0: no timer type 1 to destroy
Aug 25 18:47:00.641: TTY0/0/0: no timer type 0 to destroy
Aug 25 18:47:00.641: TTY0/0/0: no timer type 2 to destroy
Aug 25 18:47:02.642: %LINK-3-UPDOWN: Interface Cellular0/0/0, changed state to up
Aug 25 18:47:02.642: %DIALER-6-BIND: Interface Ce0/0/0 bound to profile Di1
Aug 25 18:47:03.642: %LINEPROTO-5-UPDOWN: Line protocol on Interface Cellular0/0/0,
changed state to up (69.78.96.14) [OK]

```

Modem Troubleshooting Using Integrated Modem DM Logging

As part of the 3G and 4G serviceability enhancement in Cisco IOS Release 15.2(4)M2 and Cisco IOS Release 15.3(1)T, DM log collection has been integrated into Cisco IOS, eliminating the need for an external PC and simplifying the DM log collection process. The **lte modem dm-log** command can be used in controller cellular configuration mode to configure integrated DM logging to monitor traffic on the modem. See the [Cisco 3G and 4G Serviceability Enhancement User Guide](#) for more information on configuring Integrated DM Logging parameters.

Modem Settings for North America and Carriers Operating on 700 MHz Band

For HWIC-3G deployments in North America and for carriers operating in the 700 MHz band, the following changes to the modem settings are required to prevent long network attach times.

The output of **show cellular x/x/x all** command shows the following:

- Current RSSI is -125 dBm
- LTE Technology Preference = No preference specified (AUTO)

Changing Modem Settings

To change the modem settings to force the modem to scan different technologies, use the following Cisco IOS command:

```

Device# cellular 0/0/0 lte technology ?
auto          Automatic LTE Technology Selection
cdma-1xrtt    CDMA 1xRTT
cdma-evdo     CDMA EVDO Rev A
cdma-hybrid   HYBRID CDMA
gsm           GSM
lte           LTE
umts          UMTS

```

Electronic Serial Number (ESN)

The ESN number is located directly on the modem label in hexadecimal notation. It can also be retrieved using the Cisco IOS CLI using the **show cellular slot/port/hwic hardware** command.

The sample output below shows the ESN number:

```

Hardware Information
=====
Electronic Serial Number (ESN) = 0x603c9854 [09603971156]
Electronic Serial Number (ESN) = <specific ESN in hexadecimal> [specific ESN in decimal]

```

Additional References

Related Documents

Related Topic	Document Title
Cisco IOS commands	<ul style="list-style-type: none"> <li data-bbox="613 457 1472 531">• <i>Cisco IOS Master Commands List, All Releases</i> http://www.cisco.com/en/US/docs/ios/mcl/allreleasemcl/all_book.html <li data-bbox="613 541 1472 653">• <i>Configuring Cisco EHWIC and 880G for 3G (EV-DO Rev A)</i> http://www.cisco.com/en/US/docs/routers/access/1800/1861/software/feature/guide/mrwls_evdo.html <li data-bbox="613 663 1472 804">• <i>Configuring 3G Wireless WAN on Modular and Fixed ISRs (HWIC-3G-CDMA, HWIC-3G-CDMA-x, and PCEX-3G-CDMA-x)</i> http://www.cisco.com/en/US/docs/routers/access/1800/1861/software/feature/guide/mrwlcdma.html
4G LTE EHWIC and Cisco 819 ISR commands	<i>Cisco IOS Dial Technologies Command Reference</i>

Related Topic	Document Title
Hardware Overview and Installation	<ul style="list-style-type: none"> • <i>Cisco 4G-LTE Wireless WAN EHWIC</i> http://www.cisco.com/en/US/docs/routers/access/interfaces/ic/hardware/installation/guide/EHWIC-4G-LTEHW.html
Supported Cisco antennas and cables	<ul style="list-style-type: none"> • <i>Installing Cisco Interface Cards in Cisco Access Routers</i> http://www.cisco.com/en/US/docs/routers/access/interfaces/ic/hardware/installation/guide/inst_ic.html • <i>Cisco 4G/3G Omnidirectional Dipole Antenna (4G-LTE-ANTM-D)</i> http://www.cisco.com/en/US/docs/routers/access/wireless/hardware/notes/4G3G_ant.html • <i>Cisco 4G Indoor Ceiling-Mount Omnidirectional Antenna (4G-ANTM-OM-CM)</i> http://www.cisco.com/en/US/docs/routers/access/wireless/hardware/notes/antcm4gin.html • <i>Cisco Outdoor Omnidirectional Antenna for 2G/3G/4G Cellular (ANT-4G-OMNI-OUT-N)</i> http://www.cisco.com/en/US/docs/routers/connectedgrid/antennas/installing/Outdoor_Omni_for_2G_3G_4G_Cellular.html • <i>Cisco Integrated 4G Low-Profile Outdoor Saucer Antenna (ANT-4G-SR-OUT-TNC)</i> http://www.cisco.com/en/US/docs/routers/connectedgrid/antennas/installing/4G_LowProfile_Outdoor_Saucer.html • <i>Cisco Single-Port Antenna Stand for Multiband TNC Male-Terminated Portable Antenna (Cisco 4G-AE015-R, Cisco 4G-AE010-R)</i> http://www.cisco.com/en/US/docs/routers/access/wireless/hardware/notes/4Gantex15-10r.html • <i>Cisco 4G Lightning Arrestor (4G-ACC-OUT-LA)</i> http://www.cisco.com/en/US/docs/routers/access/wireless/hardware/notes/4Glar.html • <i>Lightning Arrestor for the Cisco 1240 Connected Grid Router</i> http://www.cisco.com/en/US/docs/routers/connectedgrid/lightning_arrestor/Lightning_Arrestor_for_the_Cisco_1240_Connected_Grid_Router.html • <i>Cisco 4G Indoor/Outdoor Active GPS Antenna (GPS-ACT-ANTM-SMA)</i>

MIBs

MIB	MIBs Link
<ul style="list-style-type: none"> • IF-MIB • CISCO-ENTITY-VENDORTYPE-OID-MIB • CISCO-WAN-3G-MIB 	<p>To locate and download MIBs for selected platforms, Cisco software releases, and feature sets, use Cisco MIB Locator found at the following URL:</p> <p>http://www.cisco.com/go/mibs</p>

RFCs

RFC	Title
RFC 3025	Mobile IP Vendor/Organization-Specific Extensions

Technical Assistance

Description	Link
The Cisco Support and Documentation website provides online resources to download documentation, software, and tools. Use these resources to install and configure the software and to troubleshoot and resolve technical issues with Cisco products and technologies. Access to most tools on the Cisco Support and Documentation website requires a Cisco.com user ID and password.	http://www.cisco.com/cisco/web/support/index.html

Feature Information for Cisco 4G LTE

Table 6 lists the release history for this feature.

Use Cisco Feature Navigator to find information about platform support and software image support. Cisco Feature Navigator enables you to determine which software images support a specific software release, feature set, or platform. To access Cisco Feature Navigator, go to <http://www.cisco.com/go/cfn>. An account on Cisco.com is not required.

**Note**

Table 6 lists only the software release that introduced support for a given feature in a given software release train. Unless noted otherwise, subsequent releases of that software release train also support that feature.

Table 6 Feature Information for Cisco 4G LTE

Feature Name	Releases	Feature Information
Dual-mode LTE Support for ISR G2	Cisco IOS Release 15.1(4)M2	<p>Cisco 4G LTE WWAN EHWICs (EHWIC-4G-LTE-V for Verizon Wireless networks) support 4G-LTE cellular and 3G cellular networks. 4G-LTE mobile specification provides multi-megabit bandwidth, more efficient use of the radio network, latency reduction, and improved mobility.</p> <p>This feature was introduced for the Cisco ISR G2 modular platform.</p> <p>The following commands were introduced or modified:</p> <ul style="list-style-type: none"> • cellular slot lte • Under controller cellular unit: default lte, lte event, lte radio, lte sim, no lte
Enhancements for Dual-mode LTE Support for ISR G2	Cisco IOS Release 15.1(4)M4, 15.2(4)M, or later releases	<p>Bug Fixes. See <i>Release Notes for Cisco 4G LTE Wireless WAN EHWIC 1.0</i> at: http://www.cisco.com/en/US/docs/routers/access/interfaces/Release/Notes/RN_MM4G3GWAN.pdf</p>
Multimode 4G LTE Support for ISR G2	Cisco IOS Release 15.2(4)M1	<p>This feature is supported on the Cisco 819HG-4G and Cisco 819G-4G LTE ISRs.</p> <p>The following 4G LTE WWAN EHWICs were released:</p> <ul style="list-style-type: none"> • EHWIC-4G-LTE-A—Dedicated multimode LTE for AT&T Wireless networks. • EHWIC-4G-LTE-G—Dedicated multimode LTE for global wireless networks. <p>Multimode LTE EHWIC is backwards compatible with HSPA+, HSPA, UMTS, EDGE, and GPRS. This feature was introduced for the Cisco ISR G2 modular platforms.</p>
4G LTE GPS NMEA, SMS, and Dual SIM support	Cisco IOS Release 15.3(3)M	<p>The Cisco 819HG-4G and Cisco 819G-4G LTE ISRs and 4G LTE EHWIC MC77xx modems support the following features:</p> <ul style="list-style-type: none"> • Active and passive antenna-based Global Positioning System (GPS). • 4G Short Message Service (SMS) feature for the receiving, transmitting, archiving, and deleting of SMS messages • Dual SIM support <p>The following commands were introduced or modified: cellular lte profile, cellular lte sms delete, cellular lte sms send, cellular lte sms view, debug cellular messages, debug cellular messages sms, lte failovertimer, lte gps enable, lte gps mode standalone, lte gps nmea, lte sim authenticate, lte sim max-retry, lte sim primary, lte sim profile, lte sms archive path, show cellular gps, show cellular sms.</p>

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: www.cisco.com/go/trademarks. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1110R)

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

© 2015 Cisco Systems, Inc. All rights reserved.